SDC16809
SDC16709
SDC14709

Condensing Dryer
user manual

Planet First 100% Recycled Paper

This manual is made with 100% recycled paper.

imagine the possibilities

Thank you for purchasing this Samsung product.

DC68-02885Q-03

SAMSUNG

contents

SAFETY INFORMATION 4

4 What you need to know about Safety Instructions
4 Important safety symbols and precautions

INSTALLING YOUR DRYER 11

11 Tools needed for installation
11 See Dryer Exterior
12 Check before installing
12 Before using the product
12 Important to installer
12 Location considerations
12 Alcove or closet installation
13 Electrical requirements
13 Grounding
14 Installation side by side
14 Final installation checklist
15 Draining water without using the water tank
15 Connecting the drain hose
17 Installation stacking
18 Door Reversal(SDC16809,SDC16709 Only)

OPERATING INSTRUCTIONS, TIPS 20

20 Overview of the control panel
22 Child lock
22 Sound off
23 My cycle
23 Delay End
24 Load the dryer properly
24 Getting started

CARE AND CLEANING 25

25 Clean the filter case
25 Clean the condenser
25 Control Panel
25 Tumbler
25 Stainless Steel Tumbler
25 Dryer Exterior
26 Dumping condensed water( )
26 Cleaning the filter case( )
27 Cleaning the condenser assembly

SDC16809-02885Q-03_EN.indd Sec2:2 2014-08-22 5:06:15

SPECIAL LAUNDRY TIPS 28
28 Special laundry tips

TROUBLESHOOTING 29
29 Check these points if your dryer…
31 Information codes

APPENDIX 32
32 Fabric care chart
33 Protecting the environment
33 Declaration of conformity
33 Specifications
34 Cycle chart
35 Consumption data

SDC16809-02885Q-03_EN.indd Sec2:3 2014-08-22 5:06:15

safety information

Congratulations on your new Samsung Dryer. This manual contains important information on the installation, use, and care of your appliance. Please take the time to read this manual to take full advantage of your dryer's many benefits and features.

WARNING - Risk of Fire

- Clothes dryer installation must be performed by a qualified technician.
- Install the clothes dryer according to the manufacturer's instructions and local codes.
- To reduce the risk of severe injury or death, follow all installation instructions.

WHAT YOU NEED TO KNOW ABOUT SAFETY INSTRUCTIONS

Warnings and Important Safety Instructions in this manual do not cover all possible conditions and situations that may occur. It is your responsibility to use common sense, caution, and care when installing, maintaining, or operating your dryer.

Always contact your manufacturer about problems or conditions you do not understand.

IMPORTANT SAFETY SYMBOLS AND PRECAUTIONS

WARNING	Hazards or unsafe practices that may result in **severe personal injury or death**.
CAUTION	Hazards or unsafe practices that may result in **minor personal injury or property damage**.
CAUTION	To reduce the risk of fire, explosion, electric shock, or personal injury when using your washer, follow these basic safety precautions:

	Do NOT attempt.
	Do NOT disassemble.
	Do NOT touch.
	Follow directions explicity.
	Unplug the power plug from the wall socket.
	Make sure the machine is grounded to prevent electric shock.
	Call the service center for help.
	Note
	Read operator's manual

SDC16809-02885Q-03_EN.indd Sec1:4 2014-08-22 5:06:15

WARNING This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

WARNING Never stop a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.

Do not let children (or pets) play in or on your product. The product door does not open easily from the inside and children may be seriously injured if trapped inside.

This appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

For use in Europe: This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

SDC16809-02885Q-03_EN.indd Sec1:5 2014-08-22 5:06:15

safety information

This appliance should be positioned so that the power plug, the water supply taps, and the drain pipes are accessible.

For appliances with ventilation openings in the base, that a carpet must not obstruct the openings.

The new hose-sets supplied with the appliance are to be used and that old hose-sets should not be reused.

CAUTION: In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

The tumble dryer is not to be used if industrial chemicals have been used for cleaning.

The lint trap has to be cleaned frequently, if applicable.

Lint must not to be allowed to accumulate around the tumble dryer.
(not applicable for appliances intended to be vented to the exterior of the building)

Adequate ventilation has to be provided to avoid the back flow of gases into the room from appliances burning other fuels, including open fires.

Do not dry unwashed items in the tumble dryer.

Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.

SDC16809-02885Q-03_EN.indd Sec1:6 2014-08-22 5:06:15

Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer.

Fabric softeners, or similar products, should be used as specified by the fabric softener instructions.

The final part of a tumble dryer cycle occurs without heat (cool down cycle) to ensure that the items are left at a temperature that ensures that the items will not be damaged.

Remove all objects from pockets such as lighters and matches.

WARNING: Never stop a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.

Exhaust air must not be discharged into a flue which is used for exhausting fumes from appliances burning gas or other fuels.

The appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the tumble dryer, in such a way that a full opening of the tumble dryer door is restricted.

Children of less than 3 years should be kept away unless continuously supervised.

SDC16809-02885Q-03_EN.indd Sec1:7 2014-08-22 5:06:15

WARNING SEVERE WARNING SIGNS FOR INSTALLATION

The installation of this appliance must be performed by a qualified technician or service company.

- Failure to do so may result in electric shock, fire, an explosion, problems with the product, or injury.

Plug the power cord into an AC 230V/60Hz wall socket or higher and use the socket for this appliance only. In addition, do not use an extension cord.

- Sharing a wall socket with other appliances using a power strip or extending the power cord may result in electric shock or fire.
- Ensure that the power voltage, frequency and current are the same as those of the product specifications. Failure to do so may result in electric shock or fire. Failure Plug the power plug into the wall socket firmly.

Remove all foreign substances such as dust or water from the power plug terminals and contact points using a dry cloth on a regular basis.

- Unplug the power plug and clean it with a dry cloth.
- Failure to do so may result in electric shock or fire.

Keep all packaging materials well out of the reach of children, as packaging materials can be dangerous to children.

- If a child places a bag over its head, it may result in suffocation.

This appliance must be properly grounded.
Do not ground the appliance to a gas pipe, plastic water pipe, or telephone line.

- This may result in electric shock, fire, an explosion, or problems with the product
- Never plug the power cord into a socket that is not grounded correctly and make sure that it is in accordance with local and national codes.

Do not install or keep the product exposed to the outdoor elements.

Do not use a damaged power plug, damaged power cord or loose wall socket.

- This may result in electric shock or fire.

If the plug (power supply cord) is damaged, it must be replaced by the manufacturer or its service agent or a similar qualified technician in order to avoid a hazard.

This appliance should be positioned to be accessible to the power plug after installation.

Do not pull or excessively bend the power cord.
Do not twist or tie the power cord.
Do not hook the power cord over a metal object, place a heavy object on the power cord, insert the power cord between objects, or push the power cord into the space behind the appliance.

- This may result in electric shock or fire.

Do not pull the power cord, when unplugging the power plug.

- Unplug the power plug by holding the plug.
- Failure to do so may result in electric shock or fire.

This appliance must be properly grounded. Never plug the power cord into a receptacle that is not grounded adequately and in accordance with local and national codes. See installation instructions for grounding this appliance.

SDC16809-02885Q-03_EN.indd Sec1:8 2014-08-22 5:06:15

CAUTION SEVERE WARNING SIGNS FOR USING

Do not let children or pets on or into the product. In addition, when disposing of this product, disassemble the door lock (lever).
- This may result in children falling and injuring themselves.
- If children become locked in the product, there is a danger of suffocation.

Do not try to access the inside of the product when the drum is rotating.

Do not sit on the product or lean against the door.
- This may result in the product turning over and resulting in injury.

Dry the laundry only after it was spun by an appropriate washing machine.

Do not dry unwashed items in the tumble dryer.

Do not drink the condensed water.

Never stop a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.

Do not dry laundry contaminated by inflammable materials such as gasoline, kerosene, benzene, thinner, alcohol, etc.
- This may result in electric shock, fire or explosion.

Do not let pets chew or play with the dryer.
- This may result in electric shock or injury.

When disposing of the product, separate the door and the power cord before disposing of the product.
- Failing to do so may result in damage to the power code or an injury.

Do not touch the power plug with wet hands.
- This may result in electric shock.

Do not repair, replace, or attempt to service any part of the appliance unless specifically recommended in the user-repair instructions. You must also have the skills necessary to service this appliance.

Do not attempt to repair, disassemble, or modify the appliance yourself.
- Do not use any fuse(such as cooper, steel wire, etc.) other than the standard fuse.
- When repairing or reinstalling the appliance is required, contact your nearest service center.
- Failure to do so may result in electric shock, fire, problems with the product, or injury.

The product you have purchased is designed for domestic use only.

The use for business purposes qualifies as product misuse. In this case, the product will not be covered by the standard warranty provided by Samsung and no responsibility can be attributed to Samsung for malfunctions or damages resulting from such misuse.

SDC16809-02885Q-03_EN.indd Sec1:9 2014-08-22 5:06:15

CAUTION SIGNS FOR USING

Do not stand on top of the appliance or place objects (such as laundry, lighted candles, lighted cigarettes, dishes, chemicals, metal objects, etc.) on the appliance.
- This may result in electric shock, fire, problems with the product, or injury.

Do not touch the glass door and inside of the drum during or just after drying as it is hot.
- This may result in burns.

Do not press the buttons using sharp objects such as pins, knifes, fingernails, etc.
- This may result in electric shock or injury.

Do not use dry cleaning detergent directly and do not wash, rinse, or spin laundry contaminated by dry cleaning detergent.
- This may result in spontaneous combustion or ignition due to the heat of the oxidation of the oil.

Do not dry laundry containing forming rubber (latex) or similar rubber textures.
- If forming rubber is heated, it may start a fire.

Do not dry laundry contaminated by vegetable oil or cooking oil as a large amount of the oil will not be removed when washing the laundry. In addition, use the Cool Down cycle so that the laundry is not heated.
- The oxidization heat of the oil may start a fire.

Make sure that the pockets of all clothing to be washed are empty.
- Hard, sharp objects, such as coins, safety pins, nails, screws, or stones can cause extensive damage to the appliance.

Do not wash clothing with large buckles, buttons, or other heavy metal.

Do not use softener or a static electricity remover unless recommended by the manufacturer.
- This may result in damage to the laundry.

Do not use the dryer near dangerous powders such as coal dust, wheat flour, etc.
- This may result in electric shock, fire or an explosion.

Do not place inflammable materials near the product.
- This may result in toxic gases from the product, damage to parts, electric shock, fire or an explosion.
- The appliance should not be placed behind lockable doors etc.

SEVERE WARNING SIGNS FOR CLEANING

Do not clean the appliance by spraying water directly onto it.
Do not use benzene, thinner or alcohol to clean the appliance.
- This may result in discolouration, deformation, damage, electric shock or fire.

Before cleaning or performing maintenance, unplug the appliance from the wall socket.
- Failure to do so may result in electric shock or fire.

Clean the filter case before and after using the dryer.

Clean the inside of the product on a regular basis by asking an authorized service engineer.

Clean the condenser with water once a month.

The interior of the dryer should be cleaned periodically by qualified service personnel.

SDC16809-02885Q-03_EN.indd Sec1:10 2014-08-22 5:06:15

installing your dryer

TOOLS NEEDED FOR INSTALLATION

Hire a professional to install this dryer properly. If there is a service call performed as a result of poor setup, adjustment, and connection, it is considered the responsibility of the installer. If you install the dryer you are responsible.

Make sure you have everything necessary for proper installation (AC 230V/60Hz).

1. A GROUNDED ELECTRICAL OUTLET is required. See Electrical Requirements (See page 13).
2. CONDENSING SYSTEM - Condenses, processes and circulates hot and humid air internally using an internal heat condenser.

SEE DRYER EXTERIOR

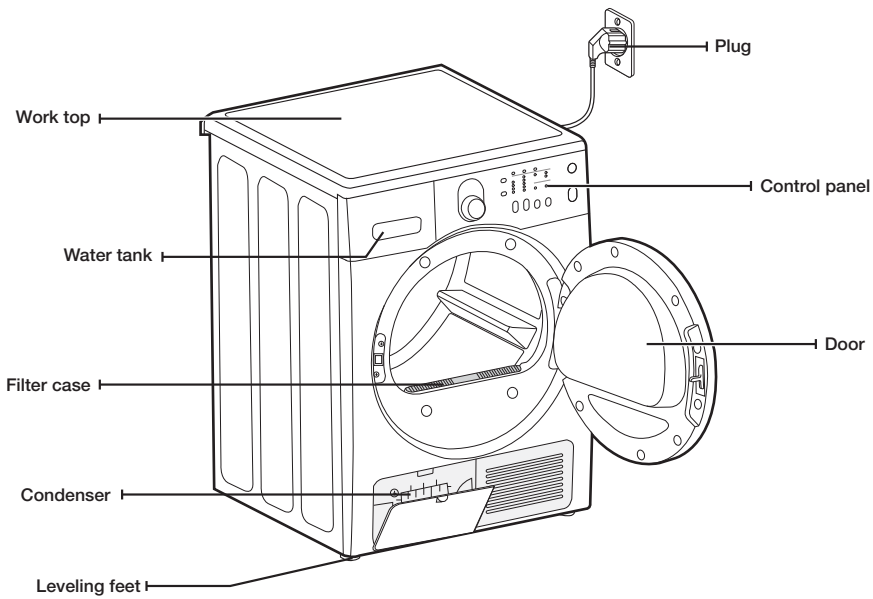

Parts



Hose guide	Cable tie	Hose connector	Long drain hose(2m)	Manual book

SDC16809-02885Q-03_EN.indd Sec3:11 2014-08-22 5:06:15

installing your dryer

CHECK BEFORE INSTALLING

- Do not plug the power cord into the wall outlet before completing the dryer installation.
- Check the appearance of the product for any damaged parts before starting the product installation.
- If there are any parts that appear to be damaged, please contact your nearest Samsung Customer Service Center.
- When moving the product, do not move the product by yourself.
- Take care of the edges of the dryer as they can be sharp.
- Do not install the dryer in a location exposed to frost. Cold water may damage the product.
- Use the product indoors only.
- Do not place the dryer on one side when lifting it, and do not move the dryer in such a way that the internal parts shake. This may result in damage to the internal parts of the product.

BEFORE USING THE PRODUCT

- Check if there are any accessories remaining inside the drum.
- Plug in the power cord just before operating the product.
- Do not block the air inlet hole of the cooling grill at the front of the dryer.
- Do not place inflammable objects near the dryer and keep the surroundings clean.
- Keep the dryer level with the ground.
- Do not remove the adjustable leveling feet of the dryer. They are necessary to keep the product level with the ground.

IMPORTANT TO INSTALLER

Please read the following instructions carefully before installing the dryer. These instructions should be kept for future reference.

⚠ WARNING REMOVE THE DOOR FROM ALL DISCARDED APPLIANCES TO AVOID THE DANGER OF A CHILD SUFFOCATING.

LOCATION CONSIDERATIONS

Because a condensing type has been adopted, which condenses and processes air inside the dryer, external ventilation is not required.

Therefore, The dryer can be installed and used in any location where the temperature is between 5 and 35 degrees centigrade, unlike a conventional dryer that requires an external exhaust system.

ALCOVE OR CLOSET INSTALLATION

To operate safely and properly, your new Dryer requires minimum clearances of:

Sides – 25 mm Rear – 51 mm

Top – 25 mm Front – 465 mm

If both the dryer and a dryer are installed together, the front of the alcove or closet must have at least 465 mm unobstructed air opening.

SDC16809-02885Q-03_EN.indd Sec3:12 2014-08-22 5:06:15

ELECTRICAL REQUIREMENTS

Electrical Requirements is AC 230V/60Hz.

WARNING

- Improper connection of the equipment grounding conductor can result in a risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether your dryer is properly grounded. Do not modify the plug provided with your dryer – if it doesn't fit the outlet, have a proper outlet installed by a qualified electrician.
- To prevent unnecessary risk of fire, electrical shock, or personal injury, all wiring and grounding must be done in accordance with local codes, or in the absence of local codes, It is your responsibility to provide adequate electrical services for your dryer.

GROUNDING

Your dryer must be grounded. If your dryer malfunctions or breaks down, grounding will reduce the risk of electric shock by providing a path of least resistance for the electric current.

Your dryer comes with a power cord having a three-prong grounding plug for use in a properly installed and grounded outlet.

Never connect the ground wire to plastic plumbing lines, gas lines, or hot water pipes.

Improperly connecting the equipment-grounding conductor can result electrical shock.

Check with a qualified electrician or serviceman if you are unsure if the dryer is properly grounded. Do not modify the plug provided with the dryer. If it does not fit the outlet, have a proper outlet installed by a qualified electrician.

WARNING If the product is not grounded, there is a danger of fire or electric shock.

SDC16809-02885Q-03_EN.indd Sec3:13 2014-08-22 5:06:15

installing your dryer

INSTALLATION SIDE BY SIDE

For proper installation, we recommend that you hire a professional. To install:

1. Move your dryer to an appropriate location for installation. Consider installing the dryer and washer side-by-side. Lay two of the carton cushion-tops on the floor. Tip your dryer on its side so it will lay across both cushion-tops.
2. Set your dryer back in an upright position.
3. To ensure that the dryer provides optimal drying performance, it must be level. To minimize vibration, noise, and unwanted movement,the floor must be a perfectly level, solid surface.

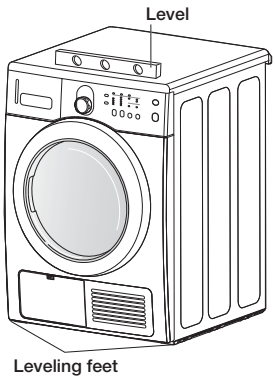

To set the dryer to the same height as the washer, fully retract the leveling feet by turning them counterclockwise, then loosen the legs by turning them clockwise

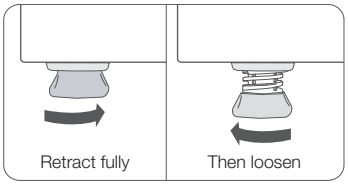

Adjust the leveling feet only as much as necessary to level the dryer.Extending the leveling feet more than necessary can cause the dryer to vibrate.

4. Review Electrical Requirements section (See page 13). BEFORE OPERATING OR TESTING.
5. With a level, check your dryer and make necessary adjustments to the leveling legs.
6. Plug in your dryer, and check operation by using the checklist below.

FINAL INSTALLATION CHECKLIST

- ☐ Dryer is plugged into electrical outlet and is properly grounded.
- ☐ Dryer is leveled and is sitting firmly on the floor.
- ☐ Start your dryer to confirm that it runs, heats, and shuts off.

SDC16809-02885Q-03_EN.indd Sec3:14 2014-08-22 5:06:15

DRAINING WATER WITHOUT USING THE WATER TANK

You can use the dryer without using the water tank by following the procedures below.

CONNECTING THE DRAIN HOSE

The Dryer can pump the condensed water outside of the DRYER directly with dain hose provide.
The procedures to connect the drain hose are as follows.

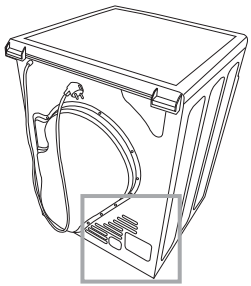

1. Disconnect the drain hose (A).

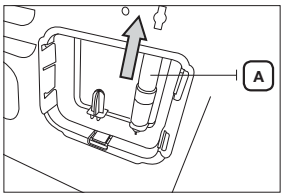

2. Connect the drain hose (A) to the other hole.

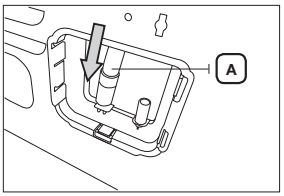

3. Connect accessory hose(long drain hose) (B) to the hole next to the hole that is connected to drain hose (A).

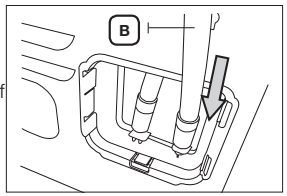

CAUTION

- When connecting hose (B), take care that the height of the hose does not exceed 90cm.
- After connecting the drain hose, you can directly drain the condensed water via the drain-outlet through the connected drain hose or through the washstand or the drain-outlet of the washstand.

SDC16809-02885Q-03_EN.indd Sec3:15 2014-08-22 5:06:15

Connecting the drain hose

The end of the drain hose can be positioned in three ways:

1. Over the edge of a wash basin: The drain hose must be placed lower than 90cm. If the end of the drain hose needs to be placed above the ground, we recommend a height of 60cm ~ 90cm. To keep the drain hose spout bent, use the supplied plastic hose guide. Secure the guide to the wall with a hook or to the tap with a piece of string to prevent the drain hose from moving.

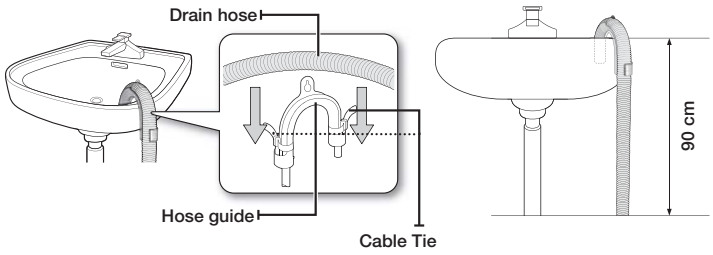

2. Assemble the drain hose and the hose guide and fix them with the cable-tie.
3. You can drain the condensed water by connecting the accessory hose (long drain hose) to the drain-outlet directly.

Connecting the direct-hose

You can immediately drain the condensed water that comes out while drying, by connecting the drain hose to the tap.

1. Assemble the hose connector and the hose.

CAUTION Since there is a danger of water leaking from the hose connecter and accessory hose, make sure that they are connected firmly.

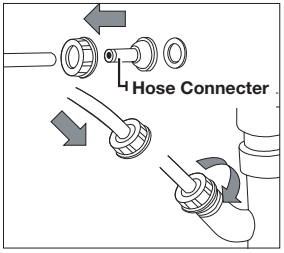

2. Connect the end of the hose to the tap.

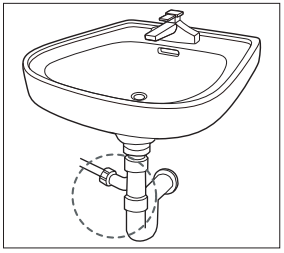

SDC16809-02885Q-03_EN.indd Sec3:16 2014-08-22 5:06:16

INSTALLATION STACKING

In case of purchasing the additional stacking kit, contact our Samsung service center or local distributers. [Part no. SK-DH / SK-DA]

1. Carefully lay the dryer on its side. Use the packing material so you don't scratch the finish on the dryer.

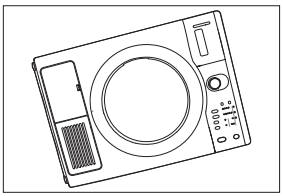

2. Install rubber pads to dryer base.

- Locate the 4 rubber pads in the parts package. Insert the rubber pads into the holes at the bottom of the leveling legs.
- Purchase the stacking-kit package additionally.

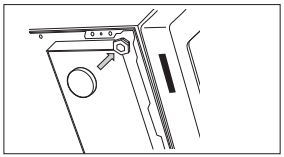

3. Set the dryer upright.

CAUTION The stacking kit can only be installed for Samsung family products.

4. Install bracket to dryer.

- Remove washer top cap screw from the rearleft. Align left bracket holes with top cap screw hole on rear left of the unit and replace screw.

Leave screw loose so dryer hole alignment will be easier.

- Repeat the above step with the right side.

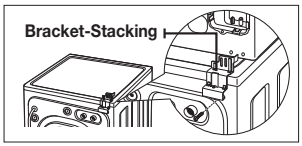

5. Install dryer and bracket on washer

WARNING

- Lift the dryer on top of the washer. Protect the washer control panel with cardboard or other protection. Be sure to lift the dryer high enough to clear the washer control panel.

Personal Injury. More than two people are recommended to lift the dryer into position because of its weight and size. Failure to do so could result in injury.

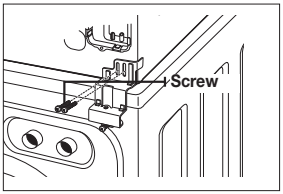

- Align the holes in the bracket with the holes in the back of the dryer.Using a Phillips screwdriver, attach the M4x12 tapping screws.
- Tighten the washer bracket screws ; then tighten all stacking kit screws.

6. Finalise the installation

WARNING

- Refer to the washer Installation Instructions to complete the washer installation.
- Refer to the dryer Installation Instructions to complete the dryer installation.
- Carefully slide or walk the stacked washer and dryer into place. Use felt pads or other sliding device to assist moving and to protect flooring.

Do not push on the dryer once installed to top of the washer. Pushing on the dryer may result in pinched fingers.

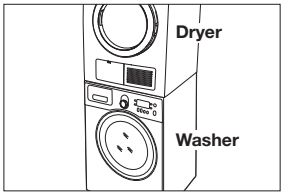

SDC16809-02885Q-03_EN.indd Sec3:17 2014-08-22 5:06:16

DOOR REVERSAL(SDC16809,SDC16709 ONLY)

Depending on your requirements (installation location, space constraints), you can change the direction the door opens.

WARNING This is done according to the customer's needs. The qualified technician or customer can do this themselves directly.

1. Unplug the power cord.
2. Remove the two screws from the door-hinge.
3. Lift the door to separate it.

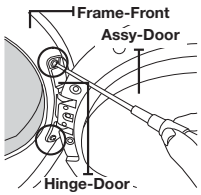

4. Remove the 16 screws.

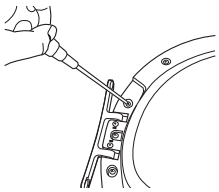

5. After removing the screw, rotate the holder-glass, the door-glass, and the cover-door (l) by 180˚ as shown in the figure.

CAUTION
- Since the holder-glass, the door-glass, and the cover-door (l) are not completely fixed, rotate them holding the lower part so that they are not separated.
- Work carefully so that the door-seal is not removed.

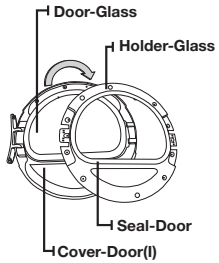

6. After rotating them by 180˚, hold them in the position as shown by the figure.

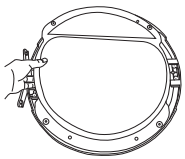

7. Assemble the glass-holder in the correct direction. (After the disassembly, assemble it by rotating it by 180˚.)

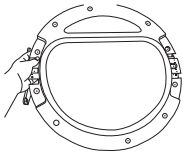

SDC16809-02885Q-03_EN.indd Sec3:18 2014-08-22 5:06:16

8. Fasten the 16 screws in the correct positions.
9. Note that two of the screws have a different length from the others. (Use the longer screws for the door-lever.)

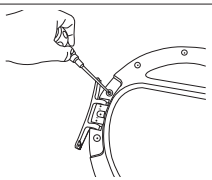

10. Move the position of the screw at the back of the door-hinge.

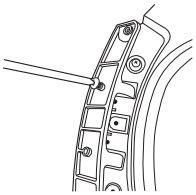

11. Fasten the screw in the bottom hole.

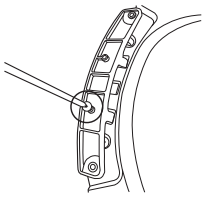

12. Remove the two screws holding the front-frame at the left.
13. Remove the two screws holding the holder-lever at the left.

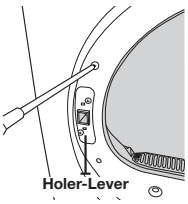

14. Now, move to the right side of the product and fasten the two screws holding the front-frame and the two screws holding the lever-holder.

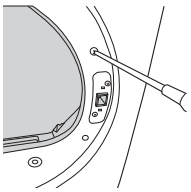

15. Align the door with the fixing holes.
16. Fasten the two screws holding the door-hinge.

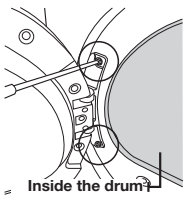

You can restore the direction the door opens by following the procedures above, if necessary.

SDC16809-02885Q-03_EN.indd Sec3:19 2014-08-22 5:06:16

OVERVIEW OF THE CONTROL PANEL

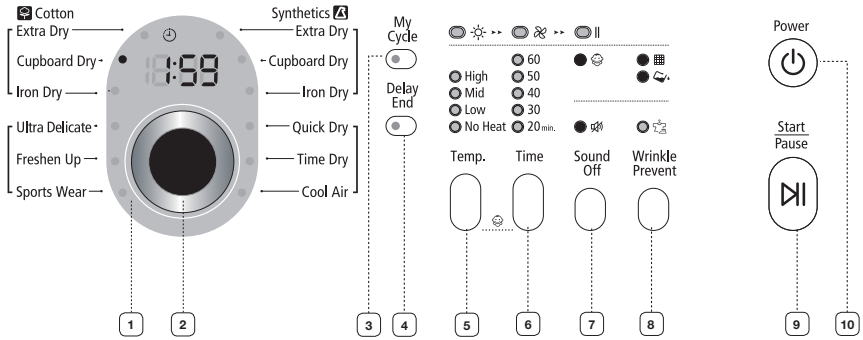

1 Digital Graphic Display	Displays the remaining drying cycle time, all cycle information, and error messages.
2 Cycle Selector	To select a cycle, rotate the Cycle Selector dial to the desired cycle. [Cottons] Cupboard Dry → ExtraDry → [Synthetics] ExtraDry → Cupboard Dry → Iron Dry → [Manual] Quick Dry → Time Dry → Cool Air → [Special] Sports Wear → Freshen Up → Ultra Delicate → [Cotton] Iron Dry → Cupboard Dry **Cotton** - For averagely or lightly soiled cottons, bed linen, table linen, underwear, towels, shirts, etc. • Extra Dry - Use for heavy-duty fabrics or items that should be very dry, such as jeans and towels. • Cupboard Dry - Use this cycle to dry loads such as cotton, underwear, and linen (NOT appropriate for jeans). • Iron Dry - Finishes the dry cycle in a moist state appropriate for Ironing. **Synthetics** - For averagely or lightly soiled blouses, shirts, etc., made of polyester (diolen, trevira), polyamide (perlon, nylon) or other similar blends. • Extra Dry - Use for heavy-duty fabrics or items that should be very dry, such as jeans and towels. • Cupboard Dry - Use this cycle to dry loads such as shirts, blouses, bed linen and table linen. (NOT appropriate for jeans). • Iron Dry - Finishes the dry cycle in a moist state appropriate for Ironing. **Manual** - For the individually different desire of drying type and times. • Quick Dry - Provides a 29 minutes drying time and high temperature level is automatically selected. • Time Dry - Time Dry allows you to select the desired cycle time and simultaneously it is possible to select the temperature level. Turn the cycle selector dial to Time Dry, then press Time Button to set the drying time. Press the Time button repeatedly to scroll through the time settings.The drying time increase in every 10 minutes up to 60 minutes. • Cool Air - For all fabrics to need freshing tumbles without heating.

SDC16809-02885Q-03_EN.indd Sec5:20 2014-08-22 5:06:16

	Special - Course for your sensible Clothes. • Ultra Delicate - The Delicates cycle is designed For lingeries at a low drying temperature. • Freshen Up - With this cycle the odors can be removed and especially this cycle freshens garments. • Sports Wear - Use for water-proofed or proofed garments to keep their good looks and fresh feel (except Gore-Tax). For better drying results, turn the laundry inside out before drying it. Overloading the dryer may not yield the same results. For the Max Load of each drying course, refer to the Cycle Chart in the appendix.
3 **My Cycle Selection Button**	Choose your favorite cycle including cycle, temp, Drying level option, etc. (See page 23 for detail.)
4 **Delay End Selection Button**	Press this button repeatedly to cycle through the available Delay End options (from 4 hours to 19 hours in one hour increments). The hour displayed indicates the time when the dry cycle will be finished.
5 **Temp Selection Button**	Press this button repeatedly to cycle through the available temperature level for the drying. (three temperature levels are available : high, medium, low)
6 **Time Selection Button**	When using Manual Dry cycles, time can be adjusted by pressing the Time Selection button. 20min→30min→40min→50min→60min During the Sensory Dry cycle, the time indicator of manual is off because exact drying times are determined by fluctuating humidity levels.
7 **Sound off button**	When the cycle is complete, a chime will sound. When the Wrinkle Prevent option is selected, the chime will sound intermittently. Adjust the volume of the chime or turn it off by pressing the Signal button. Press the button repeatedly to scroll through the choices.
8 **Wrinkle Prevent Selection Button**	Wrinkle Prevent provides approximately 60 minutes of intermittent tumbling in unheated air at the end of the cycle to reduce wrinkling. Press the Wrinkle Prevent button to activate this feature. The indicator light above the pad will illuminate when Wrinkle Prevent is selected. Dried laundry is prevented from becoming wrinkled by periodic drum rotations after the completion of the drying course. (Even after “End” is displayed, the drum rotates intermittently.)
9 **Start/Pause selection button**	Press to start a dry cycle. If the dryer is running, press it once and it will pause the dryer. Press it again to restart the dry cycle.
10 **Power button**	Press once to turn your dryer on, press again to turn it off. If your dryer is left on for more than 10 minutes without any buttons being touched, the power automatically turns off.

SDC16809-02885Q-03_EN.indd Sec5:21 2014-08-22 5:06:17

CHILD LOCK

A function to prevent children from playing with your dryer.

Activating/Deactivatin

If you want to activating/deactivatin the Child Lock, press both the **Temp.** and **Time** buttons simultaneously for 3 seconds.

The "Child Lock" will be lit when this feature is activated.

- When the power is turned on, the Child Lock function is available.
- Once you set the Child Lock function, no button, except for the Power button, will respond until you release the Child Lock function.
- If the dryer is powered on again, the Child Lock function stays on.
- When other buttons, except for the Power button, do not respond, check the Child Lock indicator to see if the function is on.

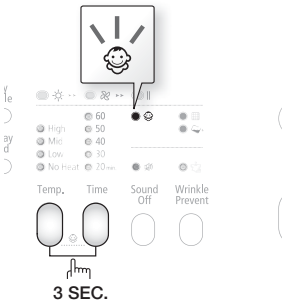

SOUND OFF

The Sound off function can be selected during all courses. When this function is selected, sound is turned off for all courses. Even if the power is turned on and off repeatedly, the setting is retained.

Activating/Deactivatin

If you want to activate or deactivate the Sound Off function, press the **Sound Off** button. The "Sound Off" and the lamp on the **Sound Off** button will be lit when this feature is activated.

SDC16809-02885Q-03_EN.indd Sec5:22 2014-08-22 5:06:17

MY CYCLE

Lets you activate your customised cycle that includes Dryness, drying temperature and time option.
By pushing the My Cycle button, you activate the settings used during the previous My Cycle mode.
(Default : Normal Cycle)
If My Cycle mode is activated, the My Cycle indicator will be lit.
You can select all options in My Cycle mode as follows.

1. Select cycle using the Cycle Selector dial.
2. After cycle selection, set each option.

Each cycle has certain default options that are automatically set.
To see these default options, go to page 32.

3. Then, you can start My Cycle by pushing the Start/Pause button in My Cycle mode. The cycle and options you select will be displayed the next time you choose My Cycle.

You can change the My Cycle settings by repeating the same process above.
The last used setting will be displayed the next time you choose My Cycle.

DELAY END

You can set the dryer to finish your drying cycle automatically at a later time, choosing a delay of between 4 to 19 hours (in 1 hour increments). The hour displayed indicates the time at which the dry will be finished.

1. Manually or automatically set your drying machine according to the type of laundry you are drying.
2. Press the **Delay End** button repeatedly until the required delay time is set. If the delay time is set, the "Delay End" function becomes ON state.
3. Press the Start/Pause button. The "Delay End" indicator will blink and the clock will begin counting down until it reaches the set time.
4. To cancel a Delay End function, press the **Power** button and then turn the dryer on again.

SDC16809-02885Q-03_EN.indd Sec5:23 2014-08-22 5:06:17

operating Instructions, tips

LOAD THE DRYER PROPERLY

- Place only one washload in your dryer at a time.
- Mixed loads of heavy and lightweight fabrics will dry differently, which may result in lightweight fabrics being dry while heavy fabrics remain damp at the end of a drying cycle.
- Add one or more similar items to your dryer when only one or two articles of clothing need drying. This improves the tumbling action and drying efficiency.
- Overloading restricts tumbling action, resulting in uneven drying as well as excessive wrinkling of some fabrics.
- Make sure to insert laundry that has been spun by an appropriate washing machine.
- No unwashed textiles should be dried
- Textiles which have been in contact with oil, alcohol, petrol etc. should not be dried.

GETTING STARTED

1. Load your dryer loosely – DO NOT overload.
2. Close the door.
3. Select the appropriate cycle and options for the load (see pages 22, 23).
4. Press the Start/Pause button.
5. The dryer indicator light will illuminate.
6. The estimated cycle time will appear in the display.
   The time may fluctuate to better indicate drying time remaining in the cycle.

- When the cycle is complete and “End” will appear in the display.
- Pressing Power cancels the cycle and stops your dryer.
- The Drying, Cooling, and Wrinkle Prevent indicator lights will illuminate during those portions of the cycle.

SDC16809-02885Q-03_EN.indd Sec5:24 2014-08-22 5:06:17

care and cleaning

CLEAN THE FILTER CASE

- After each load.
- To shorten drying time.
- To operate more energy efficiently.

Do not operate your dryer without the filter case in place.

CAUTION There is a danger of damaging the laundry when drying laundry without the filter case.

CLEAN THE CONDENSER

- Clean once a month
- Clean with water

CAUTION If you do not clean it for a long time, the drying performance may be degraded.

CONTROL PANEL

Clean with a soft, damp clothes. Do not use abrasive substances.
Do not spray cleaners directly on the panel.
The control panel finish may be damaged by some laundry pre-treatment soil and stain remover products.
Apply such products away from your dryer and wipe up any spills or overspray immediately.

TUMBLER

Remove any stains such as crayon, ink, or fabric dye (from new items such as towels or jeans) with an all-purpose cleaner.
Tumble old towels or rags to remove any excess stain or cleaning substance.
Once these steps are followed, stains may still be visible, but should not transfer to subsequent loads.

STAINLESS STEEL TUMBLER

To clean the stainless steel tumbler, use a damp cloth with a mild, non-abrasive cleaner suitable for stainless steel surfaces.
Remove the cleaner residue and dry with a clean cloth.

DRYER EXTERIOR

The entire dryer has a high-gloss finish. Clean with a soft, damp cloth. Do not use abrasive substances.
Protect the surface from sharp objects as they may scratch or damage the finish.
Do not place any heavy or sharp objects or a detergent box on the dryer. Keep them on the purchased pedestal or in a separate storage box.

SDC16809-02885Q-03_EN.indd Sec8:25 2014-08-22 5:06:17

DUMPING CONDENSED WATER(💧)

1. Pull the water-tank forwards to separate it.

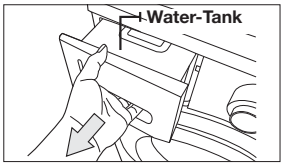

CAUTION When removing the Water tank from the product, hold it using both hands as it is heavy and take care not to spill any water inside the tank.

2. Remove the condensed water inside the water-tank.

- Remove the condensed water in the tank after every drying operation.

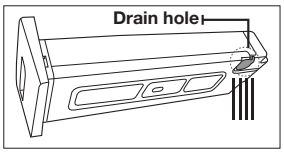

WARNING Since there is a danger of water leaking if you do not drain the water after using the product, make sure to drain the water.

If you empty the water tank and press the Start button, the Water Tank Full (💧) in the LED panel is turned off.

CLEANING THE FILTER CASE(▦)

1. Open the door and remove the filter by pulling it upwards.

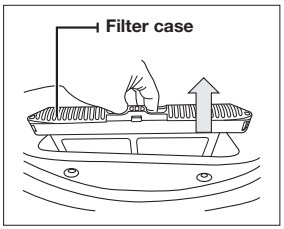

2. Open and clean the filter case.

- Clean the filter case after the drying operation is completed.

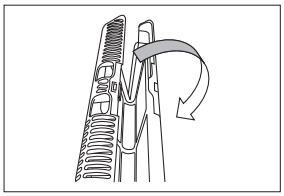

CAUTION
- Since the drying performance may be degraded and there is a danger of fire if you do not clean the filter case after the specified period of use, clean the filter case at the specified cleaning interval.
- Since the drying performance may be degraded and there is a danger of fire if you use a damaged or broken filter case, replace the filter case in this case.
- Clean the filter case after every drying operation.

- If the surface of the filter is wet, use the filter after drying it completely.
- If you clean the filter case and press the Start button, the Filter (▦) in the LED panel is turned off.

SDC16809-02885Q-03_EN.indd Sec8:26 2014-08-22 5:06:17

CLEANING THE CONDENSER ASSEMBLY

1. Open the condenser compartment cover.

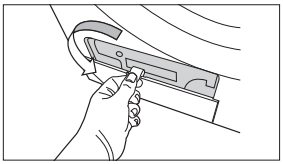

2. Unlock the fixer condenser.

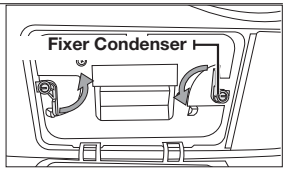

3. Remove the condenser.

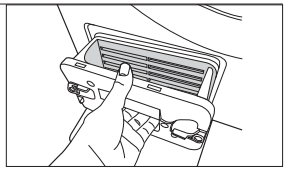

4. Clean the condenser completely under the tap letting water to flow through.

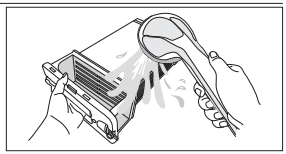

CAUTION

- Since the drying performance may be degraded if you do not clean the condenser after a specified period of use, clean the condenser at the specified cleaning interval.
- Clean it once a month.
- When assembling the condenser after cleaning it, make sure to that the fixer condenser is set to the lock position.

SDC16809-02885Q-03_EN.indd Sec8:27 2014-08-22 5:06:18

SPECIAL LAUNDRY TIPS

Please follow the care label or manufacturer's instructions for drying special items. If care label instructions are not available, use the following information as a guide.

Bedspreads & Comforters	• Follow the care label instructions or dry on the Cotton cupboard and High temperature. • Make sure the item is thoroughly dry before using or storing. • May require repositioning to ensure even drying.
Blankets	• Use Cotton cupboard and dry only one blanket at a time for best tumbling action. • Make sure the item is thoroughly dry before using or storing.
Cloth Nappies	• Use the Cotton cupboard and the High temperature settings for soft,fluffy diapers.
Down–filled Items (jackets, sleeping bags, comforters, etc.)	• Use the Cotton cupboard and the Low or Low temperature setting. • Adding a couple of dry towels shortens drying time and absorbs moisture.
Foam Rubber (rug backs, stuffed toys, shoulder pads, etc.)	• DO NOT dry on a heat setting. Use the Cool Air cycle (no heat). • WARNING – Drying a rubber item with heat may damage it or be a fire hazard.
Pillows	• Use the Cotton cupboard. • Add a couple of dry towels to help the tumbling action and to fluff the item. • DO NOT dry kapok or foam pillows in dryer. Use the Cool Air cycle.
Plastics (shower curtains, outdoor furniture covers, etc.)	• Use the Cool Air cycle or the Time Dry cycle and the Low or Low temperature settings depending on the care label instructions.

THINGS TO AVOID :

- Fiberglass items (curtains, draperies, etc.).
- Woolens, unless recommended on the label.
- Vegetable or cooking oil-soaked items.

SDC16809-02885Q-03_EN.indd Sec6:28 2014-08-22 5:06:18

troubleshooting

CHECK THESE POINTS IF YOUR DRYER...

PROBLEM	SOLUTION
Doesn't run.	• Make sure the door is latched shut. • Be sure the power cord is plugged into a live electrical outlet. • Check the home's circuit breaker and fuses. • Press the Start/Pause button again if the door is opened during the cycle. • Empty the water in the condensed water tank. • Clean the filter case.
Doesn't heat.	• Check the home's circuit breaker and fuses. • Select a heat setting other than Cool Air. • Check the case filter and condenser and clean them if necessary. • Dryer may have moved into the cool-down phase of the cycle.
Doesn't dry.	• Check all of the above, plus... • Do not overload. 1 wash load = 1 dryer load. • Sort heavy items from lightweight items. • Large, bulky items like blankets or comforters may require repositioning to ensure even drying. • Check that the dryer is draining properly to extract adequate water from the load. • Load may be too small to tumble properly. Add a few towels. • Clean the filter case. • Clean the Condenser. • Check if the cooling air vent is blocked.
Is noisy.	• Check the load for objects such as coins, loose buttons, nails, etc. Remove promptly. • Be sure the dryer is leveled properly as outlined in the installation instruction. • It is normal for the dryer to hum due to the high velocity of air moving through the dryer drum and fan.
Dries unevenly.	• Seams, pockets, and other similarly heavy areas may not be completely dry when the rest of the load has reached the selected dryness level. This is normal. Select the Extra Dry setting if desired. • If one heavy item is dried with a lightweight load, such as one towel with sheets, it is possible that the heavy item will not be completely dry when the rest of the load has reached the selected dryness level. Sort heavy items from lightweight items for best drying results.
Has an odour.	• Household odors from painting, varnishing, strong cleaners, etc. may enter the dryer with the surrounding room air. This is normal as the dryer draws the air from the room, heats it, pulls it through the tumbler, and exhausts it outside. • When these odors linger in the air, ventilate the room completely before using the dryer.
Shuts off before load is dry	• Dryer load is too small. Add more items or a few towels and restart the cycle. • Dryer load is too large. Remove some items and restart the dryer.

SDC16809-02885Q-03_EN.indd Sec4:29 2014-08-22 5:06:18

troubleshooting

PROBLEM	SOLUTION
Lint on clothes	• Make sure the lint filter is cleaned before every load. With some loads that produce high amounts of lint, it may be necessary to clean the filter case during the cycle. • Some fabrics are lint producers (for example, a fuzzy white cotton towel) and they should be dried separately from clothes that are lint trappers (for example, a pair of black linen pants) • Divide larger loads into smaller loads for drying • Check pockets thoroughly before drying and drying clothes.
Garments still wrinkled after Wrinkle prevent	• Small loads of 1 to 4 items work best. • Load fewer garments.Load similar-type garments.
Odours remain in clothing after Refresh.	• Fabrics containing strong odors should be washed.

SDC16809-02885Q-03_EN.indd Sec4:30 2014-08-22 5:06:18

INFORMATION CODES

Information codes may be displayed to help you better understand what is occurring with your Dryer.

ERROR DISPLAY	MEANING	SOLUTION
tE2	Clogged filter case is restricted.	Clean the filter case or condenser. If the problem continues call for service.
tE4		
dE	Running the dryer with door open	Close the door and then restart. If the problem continues call for service.
dF	Door is not closing properly	Call for service.
bE	Button stuck for more than 30 secs	Make sure a button is NOT being pressedcontinuously. Try restarting the cycle. If the problem continues, call for service.
hE	Clogged filter case is restricted. Invalid heating Temp when running the dryer.	Clean the filter case or condenser. If the problem continues call for service
Et	EEPROM is not communicating properly	Try restarting the cycle.If the problem continues call for service.
3E	The motor does not work properly.	Try restarting the cycle.If the problem continues call for service.
5E	The water tank is full of water. The drain pump is out of order.	Empty the water tank and start again. If the problem continues call for service.

For any codes not listed above, or if the suggested solution doesn't fix the problem, call your Samsung Service Centre or local Samsung dealer.

SDC16809-02885Q-03_EN.indd Sec4:31 2014-08-22 5:06:18

appendix

FABRIC CARE CHART

The following symbols provide garment care direction. The Clothing care labels include symbols for drying, bleaching, drying and ironing, or dry cleaning when necessary. The use of symbols ensures consistency among garment manufacturers of domestic and imported items. Follow care label directions to maximize garment life and reduce laundering problems.

Wash Cycle		**Special Instructions**		**Warning Symbols for Laundering**	
	Normal		Line Dry/ Hang to Dry		Do Not Wash
	Permanent Press / Wrinkle Resistant / Wrinkle Control		Drip Dry		Do Not Wring
	Gentle/Delicates		Dry Flat		Do Not Bleach
	Hand Wash	**Heat Setting**			Do Not Tumble Dry
Water Temperature**			High		No Steam (added to iron)
●●●	Hot		Medium		Do Not Iron
●●	Warm		Low	**Dryclean**	
●	Cold		Any Heat		Dry Clean
Bleach			No Heat/Air		Do Not Dry Clean
	Any Bleach (when needed)	**Iron-Dry or Steam Temperatures**			Line Dry/ Hang to Dry
	Only Non-Chlorine (color-safe) Bleach (when needed)		High		Drip Dry
	Tumble Dry Cycle		Medium		Dry Flat
Normal			Low		
	Permanent Press/ Wrinkle Resistant/ Wrinkle Control				
	Gentle/ Delicates				

** The dot symbols represent appropriate wash water temperatures for various items. The temperature range for Hot is 41° – 52° C, for Warm 29° – 41° C and for Cold 16° – 29° C. (Wash water temperature must be a minimum of 16° C for detergent activation and effective cleaning.)

SDC16809-02885Q-03_EN.indd Sec7:32 2014-08-22 5:06:18

PROTECTING THE ENVIRONMENT

This appliance is manufactured from recyclable materials. If you decide to dispose of this appliance, please observe local waste disposal regulations. Cut off the power cord so that the appliance cannot be connected to a power source. Remove the door so that animals and small children cannot get trapped inside the appliance.

DECLARATION OF CONFORMITY

This appliance complies with European safety standards, EC directive 93/68 and EN Standard 60335.

SPECIFICATIONS

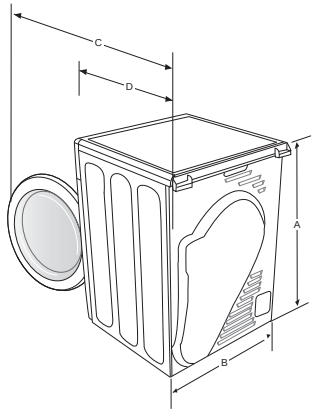

TYPE		FRONT LOADING DRYER
DIMENSIONS	**A. Height**	84.8 cm
	B. Width	59.8 cm
	C. Depth with door open 90°	108.6 cm
	D. Depth	63.4 cm
WEIGHT		43 kg
HEATER RATING		2500 W (1750 W+750 W)
POWER CONSUMPTION	**NO HEAT**	175 W
	HEATING	2700 W
He drum illumination		LED(Different according to model)

To replace the LED illumination please contact our service line.

SDC16809-02885Q-03_EN.indd Sec7:33 2014-08-22 5:06:18

appendix

CYCLE CHART

(● user option)

Cycle		Max load(kg) (Dry Laundry)	Temp.	Time	Delay End	My Cycle	Wrinkle Prevent	Sound Off	Cooling Time (min)
Cotton	Extra Dry	* 7 / * 8	High	134	●	●	●	●	5
	Cupboard Dry		High	119	●	●	●	●	5
	Iron Dry		High	99	●	●	●	●	5
Synthetics	Extra Dry	4	Medium	59	●	●	●	●	5
	Cupboard Dry		Medium	49	●	●	●	●	5
	Iron Dry		Medium	39	●	●	●	●	5
Ultra Delicate		1	Low	35	●	●	●	●	3
Freshen Up		1.5	High	30	●	●	●	●	5
Sports Wear		1.5	Low	50	●	●	●	●	5
Quick Dry		-	High	29	●	●	●	●	8
Time Dry		-	High	40	●	●	●	●	8
Cool Air		-	N/A	20	●	●	●	●	

* 7 : SDC**7** (7 kg)
* 8 : SDC**8** (8 kg)

SDC16809-02885Q-03_EN.indd Sec7:34 2014-08-22 5:06:18

CONSUMPTION DATA

Program	Load(kg)*	Final spin speed In a domestic washing machine (Rpm)	Ener(kWh)	Duration (Minutes)
Cotton Cupborad	***8	1000 (60% residual moisture)** 1400 (50% residual moisture)	4.49 4.18	119 110
	***7	1000 (60% residual moisture)** 1400 (50% residual moisture)	3.92 3.24	111 82
Cotton Iron	***8	1000 (60% residual moisture)** 1400 (50% residual moisture)	3.96 3.44	96 87
	***7	1000 (60% residual moisture)** 1400 (50% residual moisture)	3.48 2.94	99 71

1. *** :** Weight of dry laundry
   ** : EN 61121:2005 test program
2. All data without a “star” against it was calculated using EN 61121:2005
3. ***7 : SDC**7** (7 Kg)
   ***8 : SDC**8** (8 Kg)

Consumption data can vary from the nominal values given above depending in the size of the load, types of textiles, residual moisture levels after spinning, fluctuations in the electricity supply and any extra options selected.

SDC16809-02885Q-03_EN.indd Sec7:35 2014-08-22 5:06:18

QUESTIONS OR COMMENTS?

Country	CALL	OR VISIT US ONLINE AT
SAUDI ARABIA	920021230	www.samsung.com/sa/support www.samsung.com/sa_en/support (English)

DC68-02885Q-03

SDC16809
SDC16709
SDC14709

المجفف بالتكثيف
دليل المستخدم

Planet First 100% Recycled Paper

تم إنتاج هذا الدليل باستخدام ورق معاد تدويره بنسبة ١٠٠٪.

تخيل الإمكانات الهائلة

نشكرك على شراء هذا المنتج من Samsung.

SAMSUNG

DC68-02885Q-03

SDC16809-02885Q-03_AR.indd 1 2014-08-22 5:07:20

المحتويات

معلومات السلامة ٤

٤ ما يجب أن تعرفه حول إرشادات السلامة
٤ الرموز والاحتياطات المهمة للسلامة

تركيب المجفف ١١

١١ الأدوات اللازمة للتركيب
١١ نظرة حول السطح الخارجي للمجفف
١٢ الفحص قبل التركيب
١٢ إجراءات ما قبل استخدام المنتج
١٢ تعليمات هامة للتركيب
١٢ الاعتبارات المكانية
١٢ تركيب القنطرة أو الخزانة
١٣ المتطلبات الكهربية
١٣ التوصيل الأرضي
١٤ التركيب جانب بجانب
١٤ قائمة الفحص النهائية للتركيب
١٥ تصريف الماء بدون استخدام خزان الماء
١٥ توصيل خرطوم التصريف
١٧ أدوات التركيب
١٨ عكس اتجاه دوران الباب (SDC16709و SDC16809 فقط)

إرشادات التشغيل والنصائح المساعدة ٢٠

٢٠ شكل لوحة التحكم
٢٢ Child Lock (التأمين ضد عبث الأطفال)
٢٢ Sound off (إيقاف تشغيل الصوت)
٢٣ My cycle (الدورة المفضلة)
٢٣ Delay End (نهاية التأجيل)
٢٤ ملء حمولة المجفف بطريقة صحيحة
٢٤ بدء العمل

العناية والنظافة ٢٥

٢٥ قم بتنظيف حاوية المصفاة
٢٥ تنظيف المكثف
٢٥ لوحة التحكم
٢٥ البرميل الدوار
٢٥ برميل دوار من الاستانلس المضاد للصدأ
٢٥ الأسطح الخارجية للمجفف
٢٦ تفريغ الماء المتكثف ( )
٢٦ تنظيف حاوية المصفاة ( )
٢٧ تنظيف مكونات المكثف

SDC16809-02885Q-03_AR.indd Sec2:2 2014-08-22 5:07:25

النصائح الخاصة بالغسيل ٢٨
٢٨ النصائح الخاصة بالغسيل

استكشاف المشاكل وحلها ٢٩
٢٩ تحقق مما يلي إذا كان الجفف...
٣١ رموز المعلومات

الملحق ٣٢
٣٢ جدول العناية بالأقمشة
٣٣ حماية البيئة
٣٣ بيان التوافق
٣٣ المواصفات
٣٤ جدول الدورات
٣٥ بيانات الاستهلاك

SDC16809-02885Q-03_AR.indd Sec9:3 2014-08-22 5:07:25

معلومات السلامة

تهانينا على شرائك "مجفف Samsung" الجديد. يحتوى هذا الدليل على معلومات هامة حول عملية تركيب الجهاز واستخدامه والعناية به. الرجاء قراءة هذا الدليل بعناية لتتمكن من الاستفادة الكاملة من الميزات والفوائد العديدة للمجفف.

تحذير - خطر نشوب حريق

- يتعين تنفيذ تركيب مجفف الملابس بواسطة فني مؤهل.
- قم بتركيب مجفف الملابس وفقًا لإرشادات الشركة المصنّعة والقوانين المحلية.
- لتقليل خطر حدوث إصابة بالغة أو الوفاة، اتبع جميع إرشادات التركيب.

ما يجب أن تعرفه حول إرشادات السلامة

لا تغطي التحذيرات وإرشادات السلامة الهامة الواردة في هذا الدليل كافة الظروف والمواقف المحتمل حدوثها. لذا يقع على عاتقك مسؤولية اتباع المنطق السليم والتعامل بحذر ومراعاة الانتباه عند تركيب المجفف وصيانته وتشغيله.

اتصل دائمًا بالشركة المصنّعة للجهاز للاستفسار حول المشاكل والظروف التي لا تستوعبها.

الرموز والاحتياطات المهمة للسلامة

تحذير	الممارسات الخطيرة أو غير الآمنة التي قد تؤدي إلى **إصابات جسدية بالغة أو الوفاة**.
تنبيه	الممارسات الخطيرة أو غير الآمنة التي قد تؤدي إلى **إصابات طفيفة للأفراد أو تلف في الممتلكات**.
تنبيه	لتقليل احتمالات نشوب حريق أو حدوث انفجار أو التعرّض لصدمة كهربية أو إصابة جسدية أثناء استخدام الغسالة، اتّبع احتياطات السلامة الأساسية التالية:

	ممنوع المحاولة.
	ممنوع الفك.
	ممنوع اللمس.
	اتبع الإرشادات بعناية.
	افصل قابس التيار الكهربي من مقبس الحائط.
	تأكد من توصيل الغسالة بطرف أرضي لمنع التعرّض لصدمة كهربية.
	اتصل بمركز الخدمة للمساعدة.
	ملاحظة
	اقرأ دليل المشغل

SDC16809-02885Q-03_AR.indd Sec1:4 2014-08-22 5:07:26

⚠ تحذير: لم يتم تصميم هذا الجهاز ليستخدمه أشخاص لديهم نقص في قدرات جسدية أو عقلية أو حسية (بما فيهم الأطفال) أو نقص في المعرفة أو الخبرة، إلا تحت إشراف أو توجيه فيما يخص استخدام هذا الجهاز من قِبل الشخص المسئول عن سلامتهم.

تجب مراقبة الأطفال لضمان عدم عبثهم بالجهاز.

⚠ تحذير: لا تقم أبدًا بإيقاف المجفف الدوار قبل انتهاء دورة التجفيف ما لم يتم إخراج الغسيل بالكامل وتوزيعه بسرعة حتى تتبدد الحرارة.

لا تدع الأطفال (أو الحيوانات الأليفة) يلعبون داخل الغسالة أو فوقها، حيث إنه لا يمكن فتح باب الغسالة بسهولة من الداخل، وقد يصاب الأطفال بإصابات بالغة الخطورة في حالة احتباسهم بداخلها.

يجب عدم استخدام هذا الجهاز من قبل ذوي الإعاقات البدنية أو الحسية أو العقلية أو من تنقصهم المعرفة والخبرة (بما في ذلك الأطفال)، إلا إذا كانوا تحت إشراف شخص يوفر لهم إرشادات استخدام الجهاز ويكون مسؤولاً عن سلامتهم.

تجب مراقبة الأطفال لضمان عدم عبثهم بالجهاز.

بالنسبة للاستخدام في أوروبا: يمكن أن يستخدم هذا الجهاز الأطفال الذين تبدأ أعمارهم من ٨ سنوات فأكثر، بالإضافة إلى الأشخاص الذين يعانون من ضعف في قدراتهم العضلية أو الحسية أو العقلية أو أولئك الذين تنقصهم المعرّفة والخبرة إذا كانوا تحت الإشراف وعلى دراية بالإرشادات التي تتعلق باستخدام الجهاز بطريقة آمنة وفهم المخاطر المتضمنة في عملية الاستخدام.

ويجب عدم السماح للأطفال باللعب بالجهاز، كما يجب عدم السماح للأطفال بالتنظيف أو الصيانة التي يقوم بها المستخدم دون إشراف.

في حالة تلف سلك التيار الكهربائي، يجب تغييره من قبل الشركة المصنِّعة أو وكيل الصيانة الخاص بها أو أي فني مؤهل لتجنب التعرض لأي خطر.

يجب وضع الجهاز بحيث يسهل الوصول إلى قابس التيار الكهربائي وصنابير التزويد بالماء وأنابيب صرف الماء.

بالنسبة للأجهزة التي تحتوي على فتحات تهوية بقاعدتها، يجب تجنب سد السجاد لهذه الفتحات.

يجب استخدام مجموعة الخرطوم المرفقة بالغسالة ولا تعيد استخدام مجموعة الخرطوم القديمة.

SDC16809-02885Q-03_AR.indd Sec1:5 2014-08-22 5:07:26

معلومات السلامة

تنبيه: لتجنب حدوث خطر بسبب إعادة الضبط غير المقصود للقاطع الحراري، يجب ألا يتم تزويد هذا الجهاز بالطاقة من خلال جهاز فصل ووصل خارجي -مثل المؤقت- أو توصيله بدائرة كهربائية يتم تشغيلها وإيقاف تشغيلها بصورة منتظمة بواسطة مرفق الخدمة العامة.

لا تستخدم المجفف بالتدوير إذا تم استخدام مواد كيميائية صناعية عند التنظيف.

لابد من تنظيف مصيدة الوبر بشكل متكرر، إن وجدت.

يجب عدم ترك الوبر يتراكم حول المجفف بالتدوير. (لا ينطبق على الأجهزة التي يتم تهويتها من خلال السطح الخارجي للمبنى)

لابد من توفير التهوية الكافية لتجنب عودة تدفق الغازات إلى الغرفة من الأجهزة التي تحرق أنواع الوقود الأخرى، بما في ذلك النيران المشعلة.

لا تقم بتجفيف العناصر غير المغسولة في المجفف بالتدوير.

يجب غسل العناصر المتسخة بمواد مثل زيت الطهي، والأسيتون، والكحول، والبنزين، والكيروسين، ومزيلات البقع، وزيت التربنتين، والشمع ومزيلات الشمع في الماء الساخن مع كمية إضافية من المسحوق قبل أن تجفف في المجفف بالتدوير.

لا تقم بتجفيف عناصر مثل المطاط الاسفنجي (الرغوة المطاطية)، وقبعات الاستحمام، والمنسوجات المقاومة للماء، والمواد والملابس التي تحتوي على المطاط أو الوسائد المزودة ببطانة اسفنجية في المجفف بالتدوير.

يجب استخدام منعمات الأقمشة، أو المنتجات المماثلة، على النحو المحدد في ارشادات منعّم الأقمشة.

لا يحتوي الجزء الأخير من دورة المجفف بالتدوير على الحرارة (دورة تبريد) لضمان أن هذه العناصر متروكة في درجة حرارة تضمن عدم إتلافها.

قم بإزالة كافة الأشياء من الجيوب مثل الولاعات وأعواد الثقاب.

SDC16809-02885Q-03_AR.indd Sec1:6 2014-08-22 5:07:26

تحذير: لا توقف مطلقًا المجفف بالتدوير قبل نهاية دورة التجفيف ما لم يتم إزالة كافة العناصر سريعًا ونشرها بحيث يتم تبدد الحرارة.

يجب عدم تصريف الهواء العادم من خلال مداخن تستخدم لتصريف أبخرة من أجهزة احتراق الغاز أو أنواع الوقود الأخرى.

يجب أن لا يتم تركيب الجهاز خلف باب قابل للقفل، أو باب جرار، أو باب ذو مفصل على الجانب المقابل لتلك التي في المجفف. فبهذه الطريقة لن تستطيع فتح باب المجفف بالكامل.

يجب عدم اقتراب الأطفال الأقل من ٣ سنوات أو مراقبتهم دون انقطاع في حال اقترابهم.

SDC16809-02885Q-03_AR.indd Sec1:7 2014-08-22 5:07:26

معلومات السلامة

علامات التحذير الصارمة المتعلقة بالتركيب

تحذير

يجب تركيب هذا الجهاز بواسطة فني مؤهل أو شركة صيانة متخصصة.

- قد ينتج عن الفشل في إتباع هذه التعليمات حدوث صدمة كهربية أو حريق أو انفجار أو مشاكل تتعلق بالمنتج أو التعرض للإصابة.

قم بتوصيل سلك التيار الكهربي في مقبس حائط بجهد تيار متردد من ٢٣٠ فولت بتردد ٦٠ هرتز أو أعلى واستخدم هذا المقبس لتشغيل هذا الجهاز فقط. بالإضافة إلى ذلك يجب عدم استخدام سلك تمديد.

- قد تؤدي مشاركة مقبس الحائط مع أجهزة أخرى باستخدام مشترك كهرباء أو مد سلك التيار الكهربي إلى حدوث صدمة كهربية أو نشوب حريق.
- تأكد من تطابق كل من الجهد الكهربي والتردد والتيار مع القياسات الخاصة بمواصفات المنتج، حيث قد يؤدي عدم الالتزام بذلك إلى التعرّض لصدمة كهربية أو نشوب حريق. وكذلك الفشل في إدخال قابس التيار الكهربي في مقبس الحائط بإحكام.

قم بإزالة أي مواد غريبة، مثل الأتربة أو الماء من النهايات الطرفية لقابس التيار الكهربي ونقاط الاتصال باستخدام قطعة قماش جافة بانتظام.

- افصل قابس التيار الكهربي ونظفه باستخدام قطعة قماش جافة.
- حيث قد يؤدي عدم الالتزام بذلك إلى التعرّض لصدمة كهربية أو نشوب حريق.

احتفظ بجميع مواد التعبئة والتغليف بعيدة تمامًا عن متناول أيدي الأطفال، نظرًا لأنها قد تمثل خطرًا عليهم.

- قد يؤدي وضع الطفل لكيس من أكياس التغليف فوق رأسه إلى إصابته بالاختناق.

يجب توصيل الجهاز بالأرضي بشكل سليم.

لا تقم بتوصيل الجهاز بالأرضي بالقرب من أنبوب غاز أو أنبوب ماء بلاستيكي أو سلك تليفون.

- قد ينتج عن هذا الأمر حدوث صدمة كهربية أو نشوب حريق أو انفجار أو مشاكل بالمنتج
- يجب عدم توصيل سلك التيار الكهربي بمأخذ لم يتم توصيله بأرضي بشكل صحيح. وتأكد من أن ذلك يتم وفقًا للقواعد المحلية والقومية.

لا تقم بتركيب الجهاز أو حفظه بحيث يكون معرضًا للعوامل الخارجية.

لا تستخدم قابس تيار كهربي أو سلك تيار كهربي تالفًا أو مقبس حائط غير مُحكم.

- قد ينتج عن هذا الأمر حدوث صدمة كهربية أو نشوب حريق.

في حالة تلف قابس الجهاز (سلك التيار الكهربي)، يجب تغييره من قبل الشركة المصنّعة أو وكيل الصيانة الخاص بها أو أي فني مؤهل لتجنب التعرض لأي خطر.

ينبغي وضع الجهاز في مكانٍ مناسب ليسهل وصول قابس التيار الكهربي إليه بعد التركيب.

يجب عدم جذب سلك التيار الكهربي أو ثنيه بقوة.
يجب عدم لف سلك الطاقة أو طيه.
يجب عدم تعليق سلك الطاقة فوق شيء معدني أو وضع شيء ثقيل فوق سلك التيار الكهربي أو تمرير سلك التيار الكهربي بين أشياء أو دفع سلك التيار الكهربي في المساحة الموجودة خلف الجهاز.

- قد ينتج عن هذا الأمر حدوث صدمة كهربية أو نشوب حريق.

يجب عدم جذب سلك الطاقة عند فصل قابس التيار الكهربي.

- افصل قابس التيار الكهربي عن طريق الإمساك بالقابس.
- حيث قد يؤدي عدم الالتزام بذلك إلى التعرّض لصدمة كهربية أو نشوب حريق.

يجب توصيل الجهاز بالأرضي بشكل سليم. ولا توصل سلك التيار الكهربي مطلقًا بمقبس متصل بأرضي بشكل غير ملائم وغير متطابق مع القواعد المحلية والقومية. راجع إرشادات التركيب الخاصة بتوصيل هذا الجهاز بالأرضي.

SDC16809-02885Q-03_AR.indd Sec1:8 2014-08-22 5:07:26

تنبيه علامات التحذير الصارمة المتعلقة بالاستخدام

لا تضع الأطفال أو الحيوانات الأليفة فوق المنتج أو بداخله. بالإضافة إلى ذلك، قم بفك قفل الباب (ذراع الإطلاق) عند التخلص من المنتج.

- قد يتسبب هذا الأمر في سقوط الأطفال أو إصابتهم.
- في حالة احتباس الأطفال داخل المنتج، فقد يتعرضوا للاختناق.

لا تحاول الوصول إلى ما بداخل المنتج أثناء دوران الحاوية.

لا تحاول الجلوس فوق المنتج أو الإتكاء على الباب.

- قد يتسبب هذا الأمر في انقلاب المنتج والتعرض للإصابة.

لا تجفف الغسيل إلا بعد تدويره بواسطة غسالة مناسبة فقط.

تجنب تجفيف الملابس غير المغسولة داخل المجفف الدوار.

لا تشرب الماء المتكثف.

لا تقم أبدًا بإيقاف المجفف الدوار قبل انتهاء دورة التجفيف ما لم يتم إخراج الغسيل بالكامل وتوزيعه بسرعة حتى تتبدد الحرارة.

يجب عدم تجفيف الغسيل الملوث بمواد قابلة للاشتعال مثل الجاز أو الكيروسين أو البنزين أو مرقق القوام أو الكحول أو ما إلى ذلك.

- قد ينتج عن هذا الأمر حدوث صدمة كهربية أو نشوب حريق أو انفجار.

لا تدع الحيوانات الأليفة تمضغ مكونات الغسالة أو تعبث بها.

- قد ينتج عن ذلك حدوث صدمة كهربية أو إصابة.

عند التخلص من المنتج، قم بفصل الباب ونزع سلك التيار الكهربي قبل التخلص منه.

- قد يؤدي عدم الالتزام بهذه التعليمات إلى تلف سلك التيار الكهربي أو حدوث إصابة.

لا تلمس قابس التيار الكهربي بيدين مُبتلتين.

- قد ينتج عن هذا الأمر الإصابة بصدمة كهربية.

لا تقم بإصلاح أي قطعة من الجهاز أو استبدالها أو محاولة صيانتها ما لم يكن موصى بذلك في إرشادات الإصلاح الذي يقوم به المستخدِم. كما ينبغي أن تكون لديك المهارات اللازمة لصيانة هذا الجهاز.

لا تحاول إصلاح الجهاز أو فكّه أو تعديله بنفسك.

- يجب عدم استخدام أي منصهر (مثل النحاس أو سلك معدني، وما إلى ذلك) خلاف المنصهر القياسي.
- عند الحاجة إلى إصلاح الجهاز أو إعادة تركيبه، اتصل بأقرب مركز صيانة.
- قد ينتج عن الفشل في اتباع هذه التعليمات حدوث صدمة كهربية أو نشوب حريق أو مشاكل تتعلق بالمنتج أو التعرض للإصابة.

تم تصميم المنتج الذي قمت بشرائه للاستخدام المنزلي فقط.

يُعد استخدام المنتج لأغراض العمل سوء استخدام له. وفي هذه الحالة، لا يتم تغطية المنتج من قبل الضمان الأساسي الذي تقدمه شركة Samsung، كما أن شركة Samsung لا تتحمل أية مسئولية عن الأعطال أو الخسائر التي تنجم عن سوء الاستخدام.

SDC16809-02885Q-03_AR.indd Sec1:9 2014-08-22 5:07:26

معلومات السلامة

تنبيه علامات التنبيه المتعلقة بالاستخدام

يجب عدم الوقوف على الجهاز أو وضع أشياء فوقه (مثل ملابس الغسيل أو شموع مُضاءة أو سجائر مشتعلة أو أطباق أو مواد كيماوية أو أشياء معدنية، وما إلى ذلك).

- قد ينتج عن هذا الأمر الإصابة بصدمة كهربية أو نشوب حريق أو حدوث مشاكل بالمنتج أو وقوع إصابات.

لا تقم بلمس الباب الزجاجي أو ما بداخل الحاوية أثناء التجفيف أو بعده مباشرة نظرًا لسخونته.

- قد ينتج عن هذا الأمر الإصابة بحروق.

يجب عدم الضغط على الأزرار باستخدام أدوات حادة، مثل المسامير أو السكاكين أو الأظافر، وما إلى ذلك.

- قد ينتج عن ذلك حدوث صدمة كهربية أو إصابة.

لا تستخدم سائل تنظيف جاف بشكل مباشر، ولا تغسل الملابس أو تشطفها أو تجففها في حالة إضافة مسحوق تنظيف جاف إليها.

- قد يؤدي هذا الأمر إلى حدوث اشتعال فوري نتيجة للحرارة الناتجة عن تأكسد الزيت.

يحظر تجفيف الغسيل الذي يحتوي على مواد مطاطية (لاتكس) أو أقمشة مشابهة للمطاطية.

- عند ارتفاع درجة حرارة المواد المطاطية، فقد تبدأ في الاشتعال.

لا تقم بتجفيف الملابس الملوثة بزيت نباتي أو زيت طعام نظرًا لتعثر إزالة كمية الزيت الكبيرة أثناء غسل الملابس. وبالإضافة إلى ذلك، قم باستخدام دورة Cool Down (التجفيف البارد) حتى لا ترتفع حرارة الغسيل.

- قد تتسبب حرارة أكسدة الزيت في نشوب حريق.

تأكد من إفراغ جميع جيوب الملابس التي سيتم غسلها.

- قد تتسبب الأشياء الصلبة والحادة مثل العملات المعدنية أو الدبابيس أو المسامير أو المسامير القلاووظ أو الأحجار في إحداث أضرار بالغة بالجهاز.

يجب عدم غسل الملابس المزوّدة بإبزيمات أو أزرار كبيرة الحجم أو أشياء معدنية أخرى ثقيلة الوزن بالغسالة.

لا تستخدم منعم أقمشة أو مزيل كهربائي ثابت ما لم يكن معتمد من قبل الشركة المصنِّعة.

- قد يتسبب هذا الأمر في تلف الغسيل.

لا تستخدم المجفف بالقرب من المساحيق الخطيرة مثل تراب الفحم أو دقيق القمح أو ما إلى ذلك.

- قد ينتج عن هذا الأمر حدوث صدمة كهربية أو نشوب حريق أو انفجار.

لا تضع المواد القابلة للاشتعال بالقرب من المنتج.

- قد يتسبب هذا الأمر في انبعاث غازات سامة من المنتج أو تلف أجزائه أو حدوث صدمة كهربية أو نشوب حريق أو انفجار.
- ينبغي عدم وضع الجهاز خلف الأبواب القابلة للغلق أو ما إلى ذلك.

تنبيه علامات التحذير الصارمة المتعلقة بالتنظيف

لا تنظف الجهاز عن طريق رش الماء فوقه مباشرةً.

لا تستخدم البنزين أو مرقق الطلاء أو الكحول لتنظيف الجهاز.

- قد ينتج عن هذا الأمر تغيير في اللون أو تشويه أو تلف أو حدوث صدمة كهربية أو نشوب حريق.

افصل قابس الجهاز من مقبس الحائط قبل تنظيفه أو صيانته.

- حيث قد يؤدي عدم الالتزام بذلك إلى التعرّض لصدمة كهربية أو نشوب حريق.

قم بتنظيف حاوية المصفاة قبل استخدام المجفف وبعد استخدامه.

نظف الأجزاء الداخلية للمنتج بانتظام عن طريق طلب المساعدة من مهندس صيانة معتمد.

قم بتنظيف المكثف بالماء مرة واحدة شهريًا.

يجب تنظيف الأجزاء الداخلية للمجفف بشكل دوري بواسطة فني صيانة مؤهل.

SDC16809-02885Q-03_AR.indd Sec1:10 2014-08-22 5:07:26

تركيب المجفف

الأدوات اللازمة للتركيب

استعن بفني محترف لتركيب هذا المجفف بشكل صحيح. في حالة إجراء اتصال بمركز صيانة بسبب سوء التركيب أو الضبط أو التوصيل، يتحمل الفني الذي قام بتركيب المنتج المسئولية. أما إذا قمت بتركيب المجفف بنفسك، فستتحمل تلك المسئولية.

تأكد من توفر المستلزمات الضرورية للتركيب بشكل صحيح (جهد تيار متردد من ٢٣٠ فولت بتردد ٦٠ هرتز).

١. يجب توفر مأخذ تيار كهربي متصل بأرضي. قم بالإطلاع على "المتطلبات الكهربية" (راجع صفحة ١١).

٢. نظام تكثيف - يقوم بتكثيف الهواء وتوليده بالإضافة إلى توزيع الهواء الساخن والهواء الرطب داخليًا باستخدام مكثف حرارة داخلي.

نظرة حول السطح الخارجي للمجفف

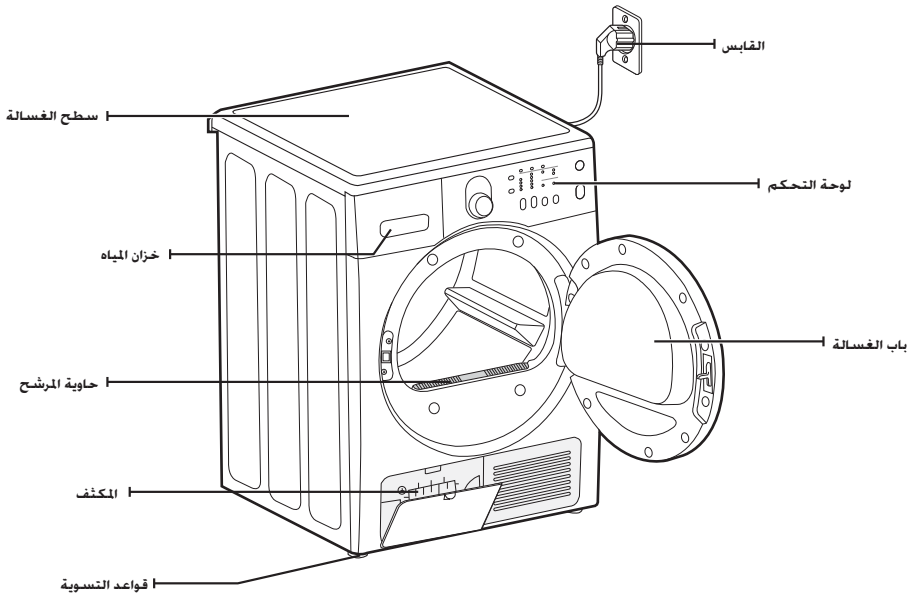

الأجزاء



حامل الخرطوم

رابط الكبل



موصل الخرطوم

خرطوم تصريف طويل (٢ م)

دليل إرشادات

SDC16809-02885Q-03_AR.indd Sec3:11 2014-08-22 5:07:26

تركيب المجفف

الفحص قبل التركيب

- لا تقم بتوصيل سلك التيار الكهربي بمقبس الحائط قبل اكتمال تركيب المجفف.
- افحص المظهر الخارجي للمنتج للتحقق من أي أجزاء تالفة قبل البدء في تركيب المنتج.
- في حالة وجود أي أجزاء تالفة، الرجاء الاتصال بأقرب "مركز خدمة عملاء لشركة Samsung".
- عند نقل المنتج، لا تنقله بنفسك.
- يجب توخي الحذر لأن حواف المجفف قد تكون حادة.
- لا تركب المجفف في مكان معرض للتجمد. قد يتسبب الماء البارد في تلف المنتج.
- استخدم المنتج في المنزل فقط.
- لا تضع المجفف على إحدى جانبيه عند حمله. ولا تنقله بطريقه تسبب اهتزازًا للأجزاء الداخلية. قد ينتج عن هذا الأمر تلف الأجزاء الداخلية للمنتج.

إجراءات ما قبل استخدام المنتج

- تحقق من وجود أي ملحقات متبقية داخل الحاوية.
- قم بتوصيل سلك التيار الكهربي قبل تشغيل المنتج.
- لا تغلق فتحة مدخل الهواء الخاصة بشبكة التبريد الموجود على اللوحة الأمامية للمجفف.
- لا تضع أشياءً قابلة للاشتعال بالقرب من المجفف وحافظ دائمًا على نظافة الأشياء المحيطة.
- حافظ على أن يكون المجفف في نفس مستوى الأرض.
- لا تنزع أرجل التسوية القابلة للضبط في المجفف، نظرًا لأنها ضرورية للحفاظ على مستوى المنتج في نفس مستوى الأرض.

تعليمات هامة للتركيب

الرجاء قراءة الإرشادات التالية بعناية قبل تركيب المجفف. يجب الحفاظ على هذه الإرشادات للرجوع إليها في المستقبل.

⚠ تحذير: قم بإزالة الأبواب من جميع الأجهزة المهملة لتجنب خطر تعرض الأطفال للاختناق.

الاعتبارات المكانية

لا يتطلب الأمر وجود جهاز تهويه خارجي نظرًا لاختيار نوع مكثف يقوم بتكثيف الهواء وتوزيعه داخل المجفف.
لذلك يمكن تركيب المجفف واستخدامه في أي مكان تكون فيه درجة الحرارة بين ٥
و٣٥ درجة مئوية. خلافًا لأجهزة المجفف التقليدية التي تتطلب نظامًا خارجيًا للتخلص من العوادم.

تركيب القنطرة أو الخزانة

للتشغيل بشكلٍ أمنٍ وسليم، يجب توفر الحد الأدنى من الفراغات كما يلي:

الجوانب - ٢٥ مم　　الجزء الخلفي ــ ٥١ مم

الجزء العلوي ــ ٢٥ مم　　الواجهة ــ ٤٦٥ مم

في حالة تركيب الغسالة والمجفف معًا، يجب أن يكون لواجهة القنطرة أو الخزانة فراغ تهوية غير مسدود من ٤٦٥ مم على الأقل.

SDC16809-02885Q-03_AR.indd Sec3:12　　2014-08-22　5:07:26

المتطلبات الكهربية

تتكون "المتطلبات الكهربية" من جهد كهربي من ٢٣٠ فولت بتردد ٦٠ هرتز.

- قد يؤدي التوصيل غير الصحيح للموصل الأرضي للجهاز إلى خطر التعرّض لصدمة كهربية.
  استشر فني كهرباء أو فني صيانة مؤهلاً إذا لم تكن متأكدًا من صحة التوصيل الأرضي للجهاز. ممنوع تعديل القابس المرفق مع المجفف - وفي حالة عدم ملاءمته مع مأخذ التيار، يفضل تركيب مأخذ تيار كهربي مناسب بواسطة فني كهرباء مؤهل.
- لتفادي خطر حدوث حريق أو التعرض لصدمة كهربية أو إصابة جسدية، يجب أن تتم كافة عمليات توصيل الأسلاك والتوصيل الأرضي وفقًا للوائح المحلية. وفي حالة عدم وجود مثل هذه اللوائح المحلية، يقع على عاتقك تحمل المسؤولية الكاملة في توفير خدمات الصيانة الكهربية الكافية للمجفف.

تحذير

التوصيل الأرضي

يتعين توصيل المجفف بمأخذ أرضي. ففي حالة حدوث خلل أو تعطل في أداء المجفف، يعمل التوصيل الأرضي على تقليل خطورة التعرض لصدمة كهربية، وذلك بتوفير مسار لأقل مقاومة للتيار الكهربي.
يتم تزويد المجفف بسلك تيار كهربي به قابس طرف أرضي بثلاثة سنون لاستخدامه في أي مأخذ أرضي تم تركيبه بشكل صحيح.

لا تقم مطلقًا بتوصيل السلك الأرضي بخطوط مواسير السباكة البلاستيكية أو خطوط الغاز أو مواسير الماء الساخن.

قد يؤدي التوصيل غير الصحيح للموصل الأرضي الخاص بالغسالة إلى حدوث صدمة كهربية.
استشر فني كهرباء مؤهلاً أو فني صيانة إذا لم تكن متأكدًا من صحة التوصيل الأرضي للمجفف. لا تعدل القابس المرفق مع المجفف. وفي حالة عدم توافقه مع مخرَج التيار، استعن بفني كهرباء مؤهلاً لتركيب مأخذ مناسب.

قد يكون هناك خطر نشوب حريق أو التعرض لصدمة كهربية، إذا لم يتم توصيل المنتج بموصل أرضي.

تحذير

SDC16809-02885Q-03_AR.indd Sec3:13 2014-08-22 5:07:26

تركيب المجفف

التركيب جانب بجانب

للتركيب الصحيح، نُوصيك بالاستعانة بفني محترف. للتركيب:

١. نقل المجفف في مكانٍ مناسب للتركيب. راعي جيدًا تركيب المجفف والغسالة جانبًا بجانب. قم بوضع قطعتين من الكرتون على شكل وسادة على الأرض. قم بإمالة المجفف على جانبه حتى يُمكن وضعه في مقابل النهايات الكرتونية.

٢. ضبط الجزء الخلفي للمجفف في موضع عمودي.

٣. يتعين أن يكون المجفف في وضعٍ مستوٍ للتأكد من أنه يُوفر الأداء الأمثل للتجفيف. لتقليل الاهتزاز والضوضاء والحركة غير المرغوب فيها. يتعين أن تكون أرضية التثبيت بسطح صلب ومستوٍ تمامًا على الأرض.

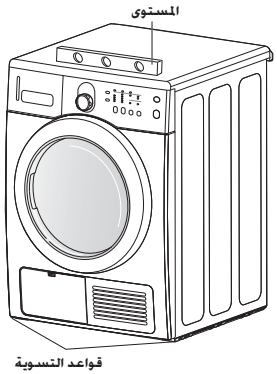

لضبط المجفف في نفس ارتفاع الغسالة، قم بتقليص طول قواعد التسوية بتدويرها ضد عقارب الساعة، ثم أرخ الأقدام بتدويرها باتجاه عقارب الساعة

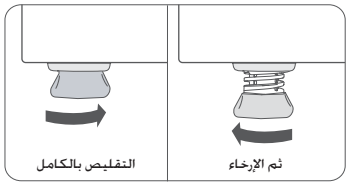

قم بضبط قواعد التسوية بالقدر المطلوب لتسوية المجفف، حيث قد يؤدي تمديد قواعد التسوية أكثر من اللازم إلى اهتزاز المجفف.

٤. راجع فقرة "المتطلبات الكهربية" (انظر الصفحة رقم ١١).
"قبل التشغيل أو الاختبار".

٥. عند التسوية، تحقق من تسوية المجفف وإجراء التعديلات اللازمة لأقدام التسوية.

٦. قم بتوصيل الكهرباء للمجفف وتحقق من عملية التشغيل باستخدام قائمة الفحص الموجودة أدناه.

قائمة الفحص النهائية للتركيب

- ☐ تم توصيل المجفف بمأخذ الكهرباء والتوصيل الأرضي بشكلٍ صحيح.
- ☐ تمت تسوية المجفف ووضعه على الأرض بإحكام.
- ☐ ابدأ تشغيل المجفف للتأكد من أنه يقوم بالتشغيل والتسخين وإيقاف التشغيل.

SDC16809-02885Q-03_AR.indd Sec3:14 2014-08-22 5:07:26

تصريف الماء بدون استخدام خزان الماء

يمكنك استخدام المجفف بدون استخدام خزان الماء عن طريق اتباع الإجراءات الموجودة أدناه.

توصيل خرطوم التصريف

يُمكن للمجفف ضخ الماء المتكثف خارج "المجفف" مباشرةً باستخدام خرطوم التصريف المرفق.
الإجراءات اللازمة لتوصيل خرطوم التصريف هي كالآتي.

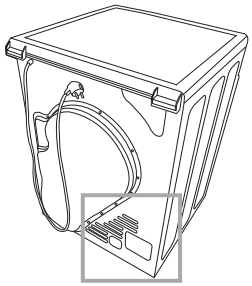

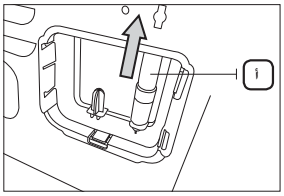

١. قم بفصل خرطوم التصريف (أ).

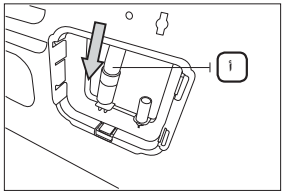

٢. قم بتوصيل خرطوم التصريف (أ) بالفتحة الأخرى.

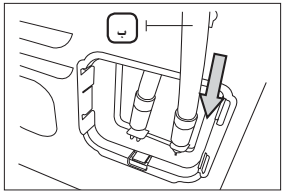

٣. قم بتوصيل الخرطوم الملحق (خرطوم تصريف طويل) (ب) بالفتحة المجاورة للفتحة المتصل بها خرطوم التصريف (أ).

تنبيه
- عند توصيل الخرطوم (ب)، الرجاء مراعاة ألا يتجاوز ارتفاع الخرطوم ٩٠ سم.
- بعد توصيل خرطوم التصريف، يُمكنك تصريف الماء المتكثف مباشرةً عن طريق منفذ التصريف بواسطة خرطوم التصريف المتصل أو من خلال المغسلة أو منفذ تصريف المغسلة.

SDC16809-02885Q-03_AR.indd Sec3:15 2014-08-22 5:07:26

تركيب المجفف

توصيل خرطوم التصريف

يمكنك وضع طرف خرطوم التصريف بثلاث طرق:

١. **فوق حافة حوض الغسيل**: يتعين وضع خرطوم التصريف على مسافة أقل ٩٠ سم. إذا كانت هناك حاجه لوضع طرف خرطوم التصريف في ارتفاع أعلى من مستوى الأرض، يُستحسن أن يكون الارتفاع ما بين ٦٠ سم إلى ٩٠ سم. لاحتفاظ بثني خرطوم التصريف، استخدم موجه الخرطوم البلاستيكي المزوّد. ثبت الموجه على الجدار بواسطة خطاف أو في الصنبور بواسطة سلك أو حبل لمنع حركة خرطوم التصريف.

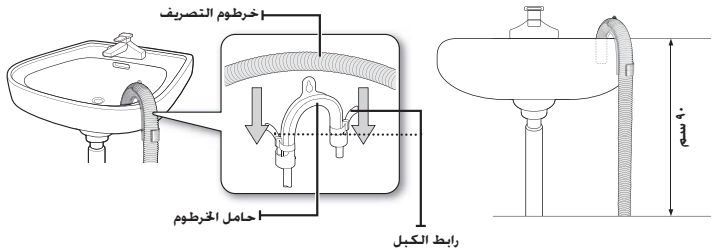

٢. قم بجَميع خرطوم التصريف مع موجه الخرطوم وربطهما باستخدام رابط الكبل.

٣. يُمكنك تصريف الماء المتكثف عن طريق توصيل الخرطوم الملحق (خرطوم التصريف الطويل) بمنفذ التصريف مباشرةً.

توصيل الخرطوم المباشر

يُمكنك على الفور تصريف الماء المتكثف الذي يخرج أثناء التجفيف، عن طريق توصيل خرطوم التصريف بالصنبور.

١. قم بتجميع موصل الخرطوم والخرطوم.

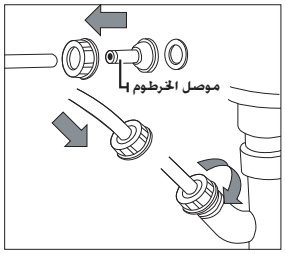

تنبيه: حيث قد يكون هناك خطر تسرب للمياه من موصل الخرطوم والخرطوم الملحق، فعليك التأكد من توصيلهما بإحكام.

٢. قم بتوصيل طرف الخرطوم بالصنبور.

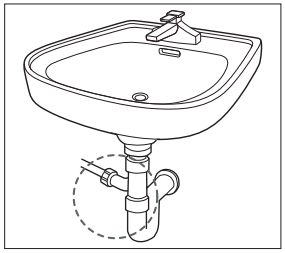

SDC16809-02885Q-03_AR.indd Sec3:16 2014-08-22 5:07:26

أدوات التركيب

في حالة شراء أدوات تثبيت إضافية، الرجاء الاتصال بمركز خدمة Samsung أو الموزعين المحلي.
[رقم القطعة SK-DH / SK-DA]

١. قم بوضع المجفف على جانبه بحرص. استخدم مواد التغليف لتجنب خدش اللمسات التجميلية للمجفف.

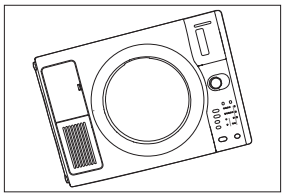

٢. قم بتركيب الوسائد المطاطية لقاعدة المجفف.
- قم بتعيين الوسادات المطاطية الأربع داخل حزمة الأجزاء. أدخل الوسادات المطاطية داخل الفتحات الموجودة في باطن أرجل التسوية.
- قم بشراء حزمة طقم التثبيت الإضافية.

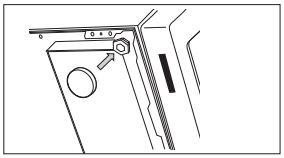

٣. قم بضبط المجفف في وضع عمودي.

تنبيه: يُمكنك تركيب أدوات التثبيت فقط لعائلة منتجات شركة "Samsung".

٤. قم بتركيب الدعامة للمجفف.
- انزع المسمار الغطائي العلوي من الغسالة على يسار الجزء الخلفي. قم بمحاذاة فتحات الدعامة اليسرى مع فتحة المسمار الغطائي العلوي على يسار الجزء الخلفي للوحدة وقم باستبدال المسمار القلاووظ.

اترك المسمار القلاووظ مرتخيًا ومن ثم يسهل محاذاة فتحة المجفف.
- أعد الخطوة المذكورة أعلاه مع الجانب الأيمن.

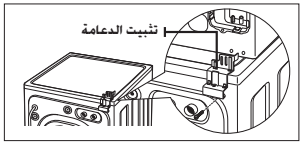

٥. قم بتركيب المجفف والدعامة في الغسالة

تحذير:
- قم برفع المجفف على الجزء العلوي من الغسالة. قم بحماية لوحة تحكم الغسالة باستخدام ورق كرتون أو أي وسائل حماية أخرى. تأكد من رفع المجفف لأعلى بقدر كافٍ لتتمكن من تنظيف لوحة تحكم الغسالة.

الإصابة جسدية. يُستحسن أن يقوم برفع المجفف لمكانه المناسب أكثر من شخصين. وذلك بسبب وزنه وحجمه. قد يؤدي عدم القيام بذلك إلى حدوث إصابة.
- قم بمحاذاة الفتحات الموجودة في الدعامة مع الفتحات الموجودة على الجزء الخلفي للمجفف. وباستخدام مفك فيليبس، قم بربط المخراق الملولب "M4x12".
- أحكم ربط المسامير القلاووظ الخاصة بدعامة الغسالة، ثم أحكم ربط جميع مسامير أدوات التثبيت.

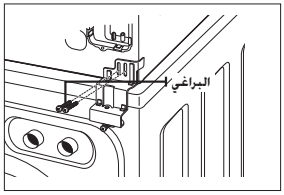

٦. اللمسات الأخيرة في عملية التركيب

تحذير:
- راجع إلى إرشادات تركيب الغسالة لاستكمال تركيبها.
- راجع إرشادات تركيب المجفف لاستكمال تركيبه.
- قم بتمرير المجفف والغسالة المكدّسين أو إزاحتهما لمكانهما المناسب. استخدم وسادات لبادية أو جهاز زالق آخر للمساعدة في التحريك وحماية الأرضية.

لا تدفع المجفف عند الانتهاء من تركيبه على الجزء العلوي للغسالة. قد يؤدي دفع المجفف إلى قرص الأصابع.

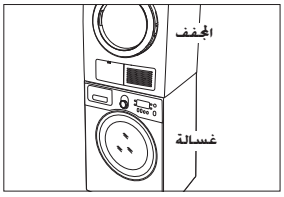

SDC16809-02885Q-03_AR.indd Sec3:17 2014-08-22 5:07:27

تركيب المجفف

عكس اتجاه دوران الباب (SDC16709وSDC16809 فقط)

يُمكنك تغيير اتجاه فتح الباب وفقًا للمتطلبات الخاصة بك (مكان التركيب و قيود المساحات).

⚠ خذير: يتم ذلك وفقًا لاحتياجات العميل. يُمكن للفني المؤهل أو العميل القيام بذلك مباشرةً بنفسيهما.

١. افصل سلك التيار الكهربي.
٢. قم بإزالة المسمارين القلاووظ من مفصلة الباب.
٣. ارفع الباب لفصله.

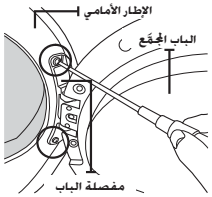

٤. قم بإزالة الستة عشر مسمارًا.

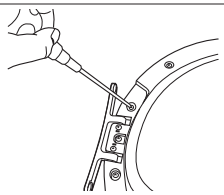

٥. بعد نزع المسمار القلاووظ. قم بلف زجاج الماسك وزجاج الباب وغطاء الباب (I) بمقدار ١٨٠ درجة كما هو موضح بالشكل.

⚠ تنبيه:
- نظرًا لعدم تثبيت زجاج الماسك وزجاج الباب وغطاء الباب (I) بشكلٍ كامل. قم بلف هذه الأشياء مسكًا بالجزء السفلي حتى لا تنفصل عن بعضها.
- تعامل بحرص حتى لا يتم انفكاك قفل الباب.

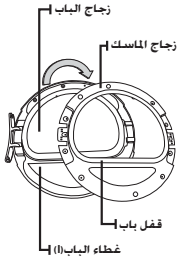

٦. بعد لف هذه الأشياء بمقدار ١٨٠ درجة، أمسكها من الموضع نفسه كما هو موضح بالشكل.

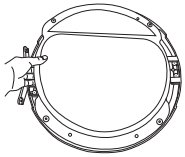

٧. قم بتجميع زجاج الماسك في الاتجاه الصحيح. (بعد الفك. قم بالتجميع بلفه بمقدار ١٨٠ درجة.)

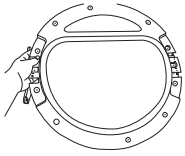

SDC16809-02885Q-03_AR.indd Sec3:18 2014-08-22 5:07:27

٨. قم بتثبيت الستة عشر مسمارًا في المواضع الصحيحة.
٩. لاحظ جيدًا أن اثنين من المسامير القلاووظ بأطوال مختلفة عن المسامير الأخرى.
(استخدم المسامير القلاووظ الأطول لذراع الباب.)

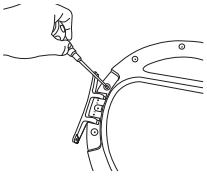

١٠. قم بنقل موضع المسمار القلاووظ الموجود على الجزء الخلفي لمفصلة الباب.

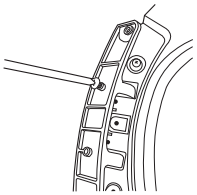

١١. قم بتثبيت المسمار القلاووظ أسفل الفتحة.

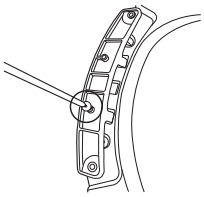

١٢. قم بنزع المسمارين القلاووظ ممسكًا بالإطار الأمامي الموجود على الجهة اليسرى.
١٣. قم بنزع المسمارين القلاووظ ممسكًا بذراع الماسك الموجود بالجهة اليسرى.

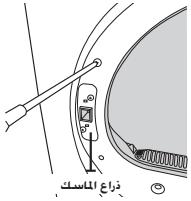

١٤. الآن، قم بالانتقال إلى الجانب الأيمن للمنتج وثبت المسمارين القلاووظ ممسكًا بالإطار الأمامي مع تثبيت المسمارين ممسكًا بذراع الماسك.

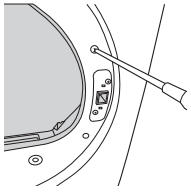

١٥. قم بمحاذاة الباب مع فتحات التثبيت.
١٦. قم بتثبيت المسمارين القلاووظ ممسكًا بمفصلة الباب.

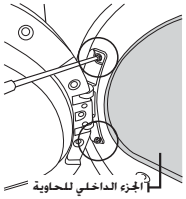

إذا كانت هناك ضرورة، يُمكنك استعادة اتجاه فتح الباب باتباع الإجراءات سالفة الذكر.

SDC16809-02885Q-03_AR.indd Sec3:19 2014-08-22 5:07:27

إرشادات التشغيل والنصائح المساعدة

شكل لوحة التحكم

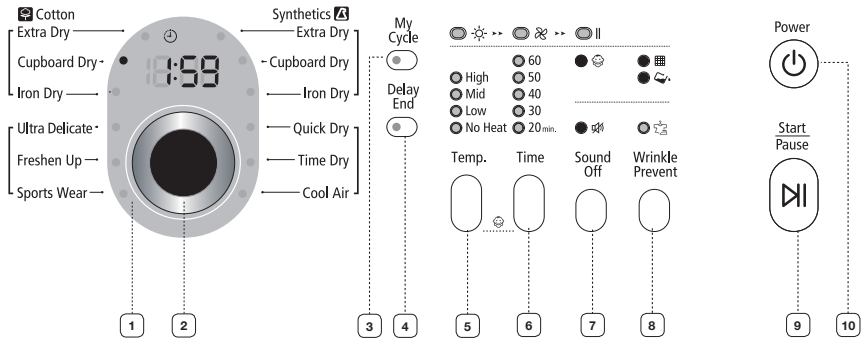

١ لوحة عرض رسومية رقمية	تعرض الوقت المتبقي لدورة التجفيف وكافة المعلومات الخاصة بالدورة ورسائل الخطأ.
٢ محدد الدورة	لتحديد دورة، قم بتدوير قرص "محدد الدورة" ليصل إلى الدورة المطلوبة. [Cottons (قطن)] Cupboard Dry (تجفيف خزانة) ← ExtraDry (تجفيف إضافي) ← [Synthetics (ألياف صناعية)] ExtraDry (تجفيف إضافي) ← Cupboard Dry (تجفيف خزانة) ← Iron Dry (تجفيف مكواة) ← [Manual (يدوي)] Quick Dry (تجفيف سريع) ← Time Dry (تجفيف بوقت) ← Cool Air (هواء بارد) ← [Special (خاص)] Sports Wear (ملابس رياضية) ← Freshen Up (الإنعاش) ← Ultra Delicate (تجفيف رقيق) ← [Cotton (قطن)] Iron Dry (تجفيف مكواة) ← Cupboard Dry (تجفيف خزانة) **Cotton (قطن)** - للملابس القطنية خفيفة أو متوسطة الاتساخ وأغطية السرير ومفارش المائدة والملابس الداخلية والمناشف والقمصان، إلخ. • Extra Dry (تجفيف إضافي) - للملابس ثقيلة الوزن أو العناصر التي ينبغي تجفيفها للغاية، مثل الملابس الجينز والمناشف. • Cupboard Dry (تجفيف خزانة) - استخدم هذه الدورة لتجفيف الملابس مثل الملابس القطنية والداخلية والملابس المصنوعة من الكتان (غير مناسب للملابس الجينز). • Iron Dry (تجفيف المكواة) - يعمل هذا الخيار على إنهاء دورة التجفيف في حالة رطبة بقدرٍ يتلاءم مع الكي. **Synthetics (ألياف صناعية)** - لغسل البلوزات والقمصان متوسطة أو خفيفة الاتساخ وغيرها من الملابس المصنوعة من البوليستر (الديولين والتريفيرا) ومادة البوليامايد (البيرلون والنيلون) أو الأنسجة الصناعية الأخرى. • Extra Dry (تجفيف إضافي) - للملابس ثقيلة الوزن أو العناصر التي ينبغي تجفيفها للغاية، مثل الملابس الجينز والمناشف. • Cupboard Dry (تجفيف خزانة) - استخدم هذه الدورة لتجفيف الملابس مثل القمصان والبلوزات وأغطية السرير والمفارش الكتانية. (غير مناسبة للملابس الجينز). • Iron Dry (تجفيف المكواة) - يعمل هذا الخيار على إنهاء دورة التجفيف في حالة رطبة بقدرٍ يتلاءم مع الكي. **Manual (يدوي)** - عند وجود رغبة لتعيين نوع التجفيف وأوقاته بشكل مختلف. • Quick Dry (تجفيف سريع) - يوفر مدة تجفيف حوالي ٢٩ دقيقة ويتم تحديد مستوى درجة حرارة مرتفع تلقائيًا. • Time Dry (تجفيف بوقت) - يُتيح لك الخيار "تجفيف بوقت" تحديد وقت الدورة الذي تريده وفي الوقت نفسه يُمكنك تحديد مستوى درجة الحرارة. أدر قرص "محدد الدورة" إلى الوضع Time Dry (تجفيف بوقت)، ثم اضغط على Time Button (زر الوقت) لتعيين وقت التجفيف. اضغط على الزر Time (الوقت) بشكلٍ متكرر للتمرير عبر إعدادات الوقت، ويزيد وقت التجفيف بمعدل ١٠ دقائق ليصل إلى ٦٠ دقيقة. • Cool Air (هواء بارد) - بالنسبة لجميع أنواع الملابس التي تحتاج إلى دورات إنعاش بدون حرارة.

SDC16809-02885Q-03_AR.indd Sec5:20 2014-08-22 5:07:27

	Special (خاص) - بالنسبة للملابس الحساسة. • Ultra Delicate (التجفيف الرقيق) - تم تصميم هذه الدورة خصيصًا للملابس الداخلية للنساء التي يتم تجفيفها تحت درجة حرارة منخفضة. • Freshen Up (الإنعاش) - بتشغيل هذه الدورة يُمكن التخلص من الروائح خصوصًا بهذه الدورة التي تعمل على إنعاش الملابس. • Sports Wear (ملابس رياضية) - تُستخدم للملابس المقاومة للماء أو ذات الطبقة العازلة للمحافظة على نظافة وجمال مظهرها.(ما عدا منتجات Gore-Tex). للحصول على نتائج تجفيف أفضل، اقلب الملابس على ظهرها قبل تجفيفها. قد لا تؤدي زيادة حمولة المجفف إلى الحصول على نفس النتائج. بالنسبة للحمولة القصوى لكل دورة تجفيف، الرجاء الرجوع إلى "جدول الدورات" الموجود في الفهرس.
٣ زر تحديد MY CYCLE (الدورة المفضلة)	اختر الدورة المفضلة لديك، بما في ذلك درجة الحرارة وخيار مستوى التجفيف وما إلى ذلك (راجع الصفحة ٢١ للحصول على تفاصيل.)
٤ زر تحديد Delay End (نهاية التأجيل)	اضغط على هذا الزر بشكل متكرر للاختيار من بين خيارات ميزة Delay End (تأجيل التوقف) المتوفرة (من ٤ ساعات إلى ١٩ ساعة بواقع زيادة ساعة واحدة). تشير الساعة المعروضة إلى وقت انتهاء دورة التجفيف.
٥ زر تحديد درجة Temp (درجة الحرارة)	اضغط هذا الزر بشكل متكرر للتبديل بين مستويات درجات الحرارة المتوفرة للتجفيف. (تتوفر ثلاث مستويات لدرجة الحرارة : عالٍ ومتوسط ومنخفض)
٦ زر تحديد Time (المدة)	عند استخدام دورات Manual Dry (تجفيف يدوي)، يُمكن ضبط المدة بالضغط على زر تحديد Time (الوقت). ٢٠ دقيقة ← ٣٠ دقيقة ← ٤٠ دقيقة ← ٥٠ دقيقة ← ٦٠ دقيقة أثناء تشغيل دورة Sensory Dry (التجفيف الحساس)، يتم إيقاف تشغيل مؤشر الوقت في الوضع "يدوي" حيث يتم تحديد أوقات التجفيف الدقيقة حسب مستويات الرطوبة المتقلبة.
٧ زر Sound off (إيقاف الصوت)	بعد اكتمال الدورة، سيتم إصدار صوت طرقة. عند تحديد الخيار Wrinkle Prevent "منع الكرمشة"، سيتم إصدار هذا الصوت بصورة متقطعة. قم بضبط مستوى صوت الطرقة أو إيقاف تشغيلها بالضغط على الزر Signal (إشارة). اضغط على الزر باستمرار للتمرير عبر الخيارات.
٨ زر تحديد Wrinkle Prevent (منع الكرمشة)	يوفر وضع Wrinkle Prevent (منع الكرمشة) حوالي ٦٠ دقيقة من التدوير المتقطع في هواء خالٍ من الحرارة في نهاية الدورات لتقليل الكرمشة. اضغط على الزر Wrinkle Prevent (منع الكرمشة) لتنشيط هذه الميزة. يضيء ضوء المؤشر الموجود فوق اللوحة عند تحديد الزر Wrinkle Prevent (منع الكرمشة). يُمكن منع الملابس الجافة من الكرمشة عن طريق تدوير الحاوية بصفة دورية بعد اكتمال دورة التجفيف. (حتى بعد عرض "End" (إنهاء)، تدور الحاوية في فترات متقطعة.)
٩ زر تحديد Start/Pause (تشغيل/إيقاف مؤقت)	اضغط لبدء تشغيل دورة التجفيف. في حالة تشغيل المجفف، اضغط على الزر مرة واحدة وسيتم إيقاف تشغيل المجفف مؤقتًا. اضغط عليه مرة أخرى لإعادة تشغيل دورة المجفف.
١٠ الزر Power (الطاقة)	اضغط على الزر مرة واحدة لتشغيل المجفف، ثم اضغط عليه مرة أخرى لإيقاف التشغيل. في حالة عدم الضغط على أي من أزرار المجفف لمدة تزيد عن ١٠ دقائق وهو قيد التشغيل، يتم إيقاف تشغيله تلقائيًا.

SDC16809-02885Q-03_AR.indd Sec5:21 2014-08-22 5:07:27

إرشادات التشغيل والنصائح المساعدة

CHILD LOCK (التأمين ضد عبث الأطفال)

هذه الوظيفة لمنع الأطفال من العبث بالمجفف.

Activating/Deactivating (التنشيط /إلغاء التنشيط)

إذا كنت تريد تنشيط/إلغاء تنشيط وظيفة Child Lock (التأمين ضد عبث الأطفال).
اضغط على الأزرار Temp. (**درجة الحرارة**) و**Time (الوقت)** في وقت واحد لمدة ٣ ثوانٍ.
ستضيء علامة "**Child Lock (التأمين ضد عبث الأطفال)** 👶" عند تنشيط هذه الميزة.

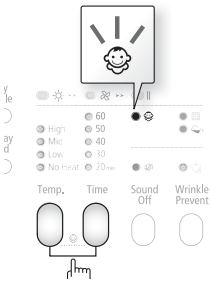

٣ ثوانٍ

- عند تشغيل الطاقة، تتوفر الوظيفة Child Lock (التأمين ضد عبث الأطفال).
- عند تعيين وظيفة Child Lock (التأمين ضد عبث الأطفال)،
  تتعذر استجابة أي زر، بخلاف زر Power (الطاقة) حتى يتم التحرر من وظيفة Child Lock (التأمين ضد عبث الأطفال).
- عند تشغيل المجفف مرةً أخرى، تَظل وظيفة Child Lock (التأمين ضد عبث الأطفال) قيد التشغيل.
- عند عدم استجابة الأزرار الأخرى، ماعدا زر Power (الطاقة)، تحقق من مؤشر وظيفة Child Lock (التأمين ضد عبث الأطفال) لمعرفة ما إذا كانت الوظيفة قيد التشغيل أم لا.

SOUND OFF (إيقاف تشغيل الصوت)

يمكن تحديد وظيفة Sound off (إيقاف تشغيل الصوت) مع كافة الدورات. عند تحديد هذه الوظيفة، يتم إيقاف تشغيل الصوت لجميع الدورات، حتى في حالة تشغيل الطاقة أو إيقاف تشغيلها بشكل متكرر، لا يتغير الإعداد الذي تم اختياره.

Activating/Deactivating (التنشيط /إلغاء التنشيط)

إذا كنت تريد تنشيط وظيفة Sound Off (إيقاف تشغيل الصوت) أو إيقاف تشغيلها، اضغط الزر **Sound Off (إيقاف تشغيل الصوت)**.
يُضيء الزر "**Sound Off (إيقاف تشغيل الصوت)** 🔇" ومصباح الزر **Sound Off (إيقاف تشغيل الصوت)** عند تنشيط هذا الزر.

SDC16809-02885Q-03_AR.indd Sec5:22 2014-08-22 5:07:27

MY CYCLE (الدورة المفضلة)

يتيح لك هذا الخيار تنشيط الدورة التي تم تخصيصها التي تتضمن Dryness (التجفيف) ودرجة الحرارة وخيار المدة.
بالضغط على الزر My Cycle (الدورة المفضلة)، يُمكنك تنشيط الإعدادات المستخدمة أثناء وضع My Cycle (الدورة المفضلة) السابق.
(الخيار الافتراضي: Normal Cycle (الدورة العادية))
إذا تم تنشيط الوضع My Cycle (الدورة المفضلة)، يُضيء مؤشر My Cycle (الدورة المفضلة).
يُمكنك تحديد جميع الخيارات المضمنة في الوضع My Cycle (الدورة المفضلة) كالآتي.

١. قم بتحديد الدورة باستخدام قرص "Cycle Selector" (محدد الدورة).
٢. بعد اختيار الدورة، قم بضبط كل خيار.

يُوجد لكل دورة خيارات افتراضية محددة يتم ضبطها تلقائيًا.
لمراجعة الخيارات الافتراضية، انتقل إلى الصفحة رقم ٣٢.

٣. ثم، يُمكنك بدء تشغيل الوضع My Cycle (الدورة المفضلة) بالضغط على الزر Start/Pause (تشغيل/إيقاف مؤقت) الموجود في الوضع My Cycle (الدورة المفضلة). يتم عرض الدورة والخيارات التي قمت بتحديدها في المرة القادمة التي تختار فيها الوضع My Cycle (الدورة المفضلة).

يُمكنك تغيير إعدادات الوضع My Cycle (الدورة المفضلة) بتكرار نفس العملية سالفة الذكر.
يتم عرض آخر إعدادات قمت باستخدامها في المرة القادمة عند اختيار الوضع My Cycle (الدورة المفضلة).

DELAY END (نهاية التأجيل)

يُمكنك ضبط المجفف ليتمكن من إنهاء دورة التجفيف تلقائيًا في وقت لاحق. كما يُمكنك اختيار مدة التأجيل بين ٤ إلى ١٩ ساعة (بزيادات من ساعة واحدة). تُشير الساعة المعروضة إلى الوقت الذي يتم عنده نهاية التجفيف.

١. يمكنك ضبط المجفف تلقائيًا أو يدويًا حسب نوع الملابس التي تريد تجفيفها.
٢. اضغط على الزر **Delay End (نهاية التأجيل)** بشكل متكرر حتى يتم ضبط وقت التأجيل المطلوب. إذا تم ضبط وقت التأجيل، تُصبح الوظيفة "Delay End" (نهاية التأجيل) بالحالة ON (تشغيل).
٣. اضغط على الزر Start/Pause (تشغيل/إيقاف مؤقت). يُومض مؤشر "Delay End (نهاية التأجيل)" ويبدأ المؤقت في العد التنازلي حتى يصل إلى الوقت المعيَّن.
٤. لإلغاء وظيفة Delay End (نهاية التأجيل)، اضغط على الزر **Power (طاقة)** ثم قم بتشغيل المجفف مرة أخرى.

SDC16809-02885Q-03_AR.indd Sec5:23 2014-08-22 5:07:28

إرشادات التشغيل والنصائح المساعدة

ملء حمولة المجفف بطريقة صحيحة

- ضع كمية غسيل واحدة فقط في كل مرة.
- يتم تجفيف حمولات الملابس المختلطة من ملابس ذات أوزان ثقيلة وأخرى خفيفة بطريقة مختلفة، بحيث يؤدي ذلك إلى تجفيف الملابس خفيفة الوزن بينما تظل الملابس ثقيلة الوزن رطبة حتى نهاية دورة التجفيف.
- قم بإضافة عنصر أو أكثر من العناصر المتشابهة للمجفف عندما تحتاج لتجفيف قطعة واحدة فقط أو قطعتين من الملابس. حيث يُحسن إجراء التدوير وكفاءة التجفيف.
- تقيد الحمولة الزائدة من عملية التدوير، مما ينتج عنه تجفيف غير مستوٍ للملابس بالإضافة إلى الكرمشة الزائدة لبعض أنواع الأنسجة.
- تأكد من إدخال الملابس التي تم تدويرها في غسَّالة مناسبة.
- عدم تجفيف الأقمشة غير المغسولة
- ينبغي عدم تجفيف الأقمشة الملامسة المبقعة بالزيت أو الكحول أو البترول أو ما إلى ذلك.

بدء العمل

١. حمل المجفف بقدر قليل - تجنب الحمولة الزائدة.
٢. أغلق الباب.
٣. حدد الدورة والخيارات المناسبة للكمية (راجع الصفحات من ٢٠ إلى ٢١).
٤. اضغط على الزر Start/Pause (تشغيل/إيقاف مؤقت).
٥. سيضيء مؤشر المجفف.
٦. سيظهر وقت الدورة المقدر في شاشة العرض.
قد يتقلب الوقت ليُشير على نحو أفضل لوقت التجفيف المتبقي في الدورة.

- عند اكتمال الدورة يظهر الخيار "End" (إنهاء) على شاشة العرض.
- يعمل الضغط على الزر Power (طاقة) لإلغاء الدورة وإيقاف تشغيل المجفف.
- يُضيء مؤشر Drying (تجفيف) وCooling (تبريد) وWrinkle Prevent (منع الكرمشة) أثناء أجزاء هذه الدورة.

SDC16809-02885Q-03_AR.indd Sec5:24 2014-08-22 5:07:28

العناية والنظافة

قم بتنظيف حاوية المصفاة

- بعد كل حمولة.
- لتقليل وقت التجفيف.
- لاستغلال الطاقة بكفاءة أكبر.

لا تقم بتشغيل المجفف بدون أن تكون حاوية المصفاة في مكانها.

تنبيه: يوجد خطر تلف الملابس عند تجفيف الملابس بدون حاوية المصفاة.

تنظيف المكثف

- التنظيف مرة كل شهر
- التنظيف بالماء

تنبيه: قد يتدهور أداء التجفيف، إذا لم يتم التنظيف لفترة طويلة.

لوحة التحكم

قم بالتنظيف باستخدام قطعة قماش ناعمة ورطبة. لا تستخدم مواد كاشطة.

لا تقم برش المنظفات على اللوحة مباشرة.

قد تتلف اللمسات التجميلية للوحة التحكم بواسطة بعض منتجات الملابس سابقة المعالجة التي تُستخدم لإزالة التلوث والبقع.

استعمل مثل هذه المنتجات بعيدًا عن المجفف وقم بمسح أي بقع أو كميات الرش الزائدة على الفور.

البرميل الدوار

قم بإزالة أي بقع مثل الكربون أو الحبر أو أصباغ الملابس (من العناصر الجديدة مثل المناشف أو الجينز) باستخدام منظف يفي بهذه الأغراض كافة.

قم بتدوير المناشف أو قطع القماش القديمة لإزالة أي بقع زائدة أو مواد تنظيف.

عند اتباع هذه الخطوات، قد تظل هذه البقع ظاهرة، لكن ينبغي عدم نقلها إلى الحمولات التالية من الملابس.

برميل دوار من الاستانلس المضاد للصدأ

لتنظيف البرميل الدوار المصنوع من الاستانلس المضاد للصدأ، استخدم قطعة قماش مبللة مع منظف رطب غير كاشط ومناسب للأسطح المصنوعة من الاستانلس المضاد للصدأ.

أزل بقايا المنظف وقم بالتجفيف باستخدام قطعة قماش نظيفة.

الأسطح الخارجية للمجفف

للمجفف بالكامل لمسات تجميلية عالية اللمعة. قم بالتنظيف باستخدام قطعة قماش ناعمة ورطبة. لا تستخدم مواد كاشطة. وقم بحماية سطح المنتج من الأجسام الحادة لأنها قد تتسبب في خدش الشكل الخارجي للمنتج أو تلفه.

لا تضع أي أجسام ثقيلة أو حادة ولا علبة المنظف على المجفف. بل احفظها بالقاعدة التي اشتريتها أو في صندوق تخزين منفصل؛

SDC16809-02885Q-03_AR.indd Sec8:25 2014-08-22 5:07:28

العناية والنظافة

تفريغ الماء المتكثف (💧)

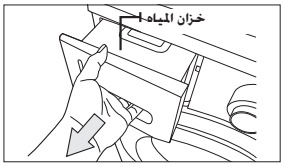

١. اسحب خزان المياه للأمام لفصله.

تنبيه: عند إزالة خزان المياه من المنتج، اقبض عليه بكلتا يديك لأنه ثقيل الوزن وانتبه جيدًا لكي لا تُسقط أي ماء داخل الخزان.

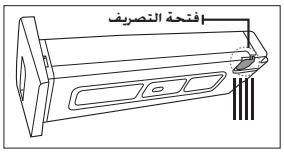

٢. أزل الماء المتكثف الموجود داخل الخزان.

- أزل الماء المتكثف الموجود في الخزان بعد كل عملية تجفيف.

تحذير: تأكد من تصريف الماء، لأنه قد ينشأ خطر تسرب الماء إذا لم تقم بتصريفه بعد استخدام المنتج.

إذا قمت بإفراغ خزان المياه والضغط على الزر Start (ابدأ)، يتم إيقاف تشغيل العلامة Water Tank Full (خزان الماء ممتلئ) (💧) الموجودة في لوحة بيان LED.

تنظيف حاوية المصفاة (▦)

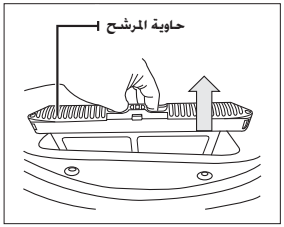

١. افتح الباب وقم بإزالة المصفاة بسحبها لأعلى.

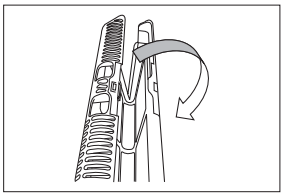

٢. افتح حاوية المصفاة وقم بتنظيفها.

- قم بتنظيف حاوية المصفاة بعد اكتمال عملية التجفيف.

تنبيه:

- قد يتناقص أداء التجفيف ويكون هناك خطر نشوب حريق إذا لم تقم بتنظيف حاوية المصفاة بعد كل فترة استخدام محددة، لذا قم بتنظيف حاوية المصفاة على فترات تنظيف محددة.
- نظرًا لاحتمال تدهور أداء التجفيف مع نشوء خطر حدوث حريق إذا قمت باستخدام حاوية مصفاة تالفة أو مكسورة، فعليك استبدل حاوية المصفاة في هذه الحاوية.
- قم بتنظيف حاوية المصفاة بعد كل عملية تجفيف.

- إذا كان السطح الخارجي للمنتج مُبَلل، استخدم المصفاة بعد تجفيفها بشكل كامل.
- إذا قمت بتنظيف حاوية المصفاة مع الضغط على الزر Start (ابدأ)، يتم إيقاف تشغيل Filter (المصفاة) (▦) في لوحة بيان LED.

SDC16809-02885Q-03_AR.indd Sec8:26 2014-08-22 5:07:28

تنظيف مكونات المكثف

١. قم بفتح غطاء حجرة المكثف.

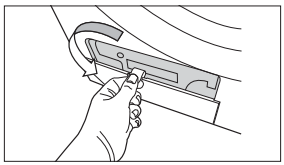

٢. قم بفك قفل مثبت المكثف.

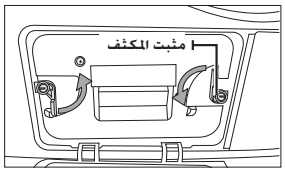

٣. قم بفك المكثف.

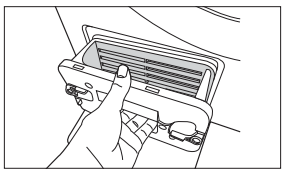

٤. قم بتنظيف المكثف بشكل كامل تحت الصنبور لتسمح للماء بالتدفق خلاله.

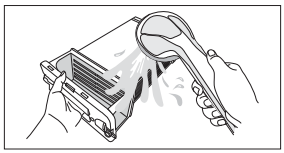

تنبيه

- نظرًا لاحتمال تدهور أداء التجفيف إذا لم تقم بتنظيف المكثف بعد فترة محددة من الاستخدام، قم بتنظيف المكثف على فترات تنظيف محددة.
- قم بتنظيفه مرة كل شهر.
- عند تركيب المكثف بعد تنظيفه، تأكد من ضبط مثبت المكثف في موضع القفل.

SDC16809-02885Q-03_AR.indd Sec8:27 2014-08-22 5:07:28

النصائح الخاصة بالغسيل

النصائح الخاصة بالغسيل

الرجاء اتباع رمز علامة العناية أو إرشادات الشركة المصنعة الخاصة بتجفيف عناصر معنية. إذا لم تتوفر إرشادات رمز علامة العناية، استخدم المعلومات الآتية كدليل.

أغطية السرير والأخفة	• اتبع إرشادات رمز علامة العناية أو تجفيف الموجود على خزانة "Cotton" (القطن) ودرجة الحرارة المرتفعة. • تأكد من تجفيف العناصر تمامًا قبل الاستخدام أو التخزين. • قد يتطلب تصحيح موضعه لضمان التجفيف التام.
البطانيات	• استخدم خزانة Cotton (قطن) وقم بتجفيف بطانية واحدة فقط في كل مرة للحصول على أفضل أداء للتدوير. • تأكد من تجفيف العناصر تمامًا قبل الاستخدام أو التخزين.
حفاظات الملابس	• استخدم خزانة Cotton (قطن) وإعدادات درجة الحرارة المرتفعة للحفاظات الرقيقة والناعمة.
العناصر المملوءة بالحشو (الجواكيت وحقائب النوم والأخفة، إلى آخره)	• استخدم خزانة Cotton (قطن) وإعدادات الوضع Low (منخفض) أو درجة الحرارة المنخفضة. • تعمل إضافة زوج من المناشف على تقليل وقت التجفيف وامتصاص كمية الرطوبة.
مطاط إسفنجي (أغلفة السجاد والدمى المحشوة وأخفة الكتف، وما إلى ذلك.)	• لا تقم بالتجفيف عند التشغيل على أحد إعدادات التسخين. استخدم دورة Cool Air (الهواء البارد) (بدون حرارة). • تحذير - قد يؤدي تجفيف العناصر المطاطية بالحرارة إلى تلفها أو خطر نشوب حريق.
الوسائد	• استخدم خزانة Cotton (قطن). • أضف زوج من المناشف الجافة للمساعدة في عملية التدوير وتحسين نعومة العنصر. • لا تجفف الكابوك أو الوسائد المحشوة داخل المجفف. استخدم دورة Cool Air (الهواء البارد).
المواد البلاستيكية (ستائر الحمام وأغطية الأثاث الخارجي وما إلى ذلك.)	• استخدم دورة Cool Air (الهواء البارد) أو دورة Time Dry (تجفيف بوقت) وإعدادات الوضع Low (منخفض) أو درجة الحرارة المنخفضة وفقًا لإرشادات رمز علامة العناية.

أشياء هامة لتتجنبها :

- عناصر الملابس المصنوعة من الفيبرجلاس (الستائر وأغطية الأثاث وما إلى ذلك).
- الملابس الصوفية، باستثناء المُوصى بها على بطاقة العناية.
- عناصر الملابس الملوثة بزيت نباتي أو زيت الطهي.

SDC16809-02885Q-03_AR.indd Sec6:28 2014-08-22 5:07:28

استكشاف المشاكل وحلها

تحقق مما يلي إذا كان المجفف...

المشكلة	الحل
المجفف لا يعمل.	• تأكد من إغلاق الباب بإحكام بالمزلاج. • تأكد من توصيل سلك التيار الكهربي بمنفذ تيار كهربي مباشر. • تحقق من قواطع الصهيرة وقواطع الدوائر المنزلية. • اضغط على الزر Start/Pause (تشغيل/إيقاف مؤقت) مرة أخرى إذا تم فتح الباب أثناء الدورة. • أفرغ الماء الموجود في خزان المياه المتكثف. • قم بتنظيف حاوية المصفاة.
المجفف لا يقوم بالتسخين.	• تحقق من قواطع الصهيرة وقواطع الدوائر المنزلية. • قم بتحديد إعدادات تسخين غير Cool Air (هواء بارد). • تحقق من حاوية المصفاة والمكثف وقم بتنظيفهما إذا كانت هناك ضرورة. • قد يتم نقل المجفف إلى مرحة التبريد في بالدورة.
المجفف لا يقوم بالتجفيف.	• تحقق من جميع الإجراءات أعلاه، بالإضافة إلى... • ممنوع الإفراط في تحميل الملابس. ١ حمولة غسيل = ١ حمولة مجفف. • قم بفرز العناصر ثقيلة الوزن من العناصر الخفيفة. • قد تتطلب عناصر الغسيل كبيرة الحجم مثل البطاطين أو الألحفة تصحيح موضعها لضمان التجفيف التام. • تحقق أن المجفف يقوم بالتصريف بطريقة صحيحة لامتصاص كمية مياه كافية من حمولة الملابس. • قد تكون حمولة الملابس صغيرة للغاية بحيث يتعذر تدويرها بطريقة صحيحة. قم بإضافة كمية قليلة من المناشف. • قم بتنظيف حاوية المصفاة. • قم بتنظيف المكثف. • تحقق مما إذا ما كانت فتحة هواء التبريد مغلقة.
هل يوجد ضوضاء.	• تحقق من وجود بعض الأجسام مثل العملات المعدنية والأزرار المفكوكة والمسامير داخل الحمولة. وقم بإزالتها على الفور. • تأكد من تسوية المجفف بشكل صحيح كما هو موضح في إرشادات التركيب. • يُعد أمرًا طبيعيًا أن يكون هناك صوت "همهمة" نتيجة للسرعة العالية للهواء المتحرك خلال حاوية المجفف والمروحة.
التجفيف بشكل غير تام.	• قد يتعذر تجفيف الحواشي المحيطة والجيوب وبعض المناطق الثقيلة التي تشبهها عند وصول بقية الحمولة إلى مستوى التجفيف المحدد. وبعد هذا أمرًا طبيعيًا. قم بتحديد الإعداد Extra Dry (تجفيف إضافي) إذا تطلب الأمر ذلك. • إذا تم تجفيف عنصر واحد ثقيل مع حمولة خفيفة الوزن، على سبيل المثال منشفه مع ملاءة، قد يكون من الممكن أنه لم يتم تجفيف العنصر الثقيل بشكل كامل عند وصول بقية الحمولة إلى مستوى التجفيف المحدد. قم بفرز عناصر الملابس ثقيلة الحجم عن الخفيفة للحصول على نتائج التجفيف المثلى.
هل توجد رائحة.	• قد تدخل الروائح المنزلية الناتجة عن الدهان أو الطلاء أو المنظفات القوية أو ما إلى ذلك، داخل المجفف محملة بالهواء المحيط بالغرفة. يُعد أمرًا طبيعيًا أن يقوم المجفف بجلب الهواء من الغرفة وتسخينه وسحبه خلال الحاوية والتخلص منه خارجًا. • عندما تَظل هذه الروائح محملة في الهواء، قم بتهوية الغرفة بشكلٍ كامل قبل استخدام المجفف.
إيقاف التشغيل قبل تجفيف الحمولة	• الأشياء المراد تجفيفها صغيرة جدًا. قم بإضافة كمية أكبر من عناصر الملابس وعدة مناشف وأعد تشغيل الدورة. • الأشياء المراد تجفيفها كبيرة جدًا. قم بإزالة بعض عناصر الملابس وأعد تشغيل المجفف.

SDC16809-02885Q-03_AR.indd Sec4:29 2014-08-22 5:07:28

استكشاف المشاكل وحلها

المشكلة	الحل
النسالة الموجودة بالملابس	• تأكد من تنظيف مصفاة النسالة قبل كل حمولة. بالنسبة لبعض حمولات الملابس التي ينتج عنها كمية كبيرة من النُسالة، قد يكون من الضروري تنظيف حاوية المرشح أثناء الدورة. • بعض الملابس تكون مخرِّجة للنُسالة (على سبيل المثال، مناشف القطن البيضاء الناعمة) وينبغي جَفيفها بشكل منفصل عن الملابس التي تتشابك مع النُسالة (على سبيل المثال، سروال أسود من الكتان) • قم بتقسيم حمولات الملابس كبيرة الحجم لأخرى صغيرة حتى يُمكن جَفيفها • قم بفحص الجيوب تمامًا وملابس التجفيف قبل عملية التجفيف.
تظل الملابس مكرمشة بعد تشغيل خاصية Wrinkle prevent (منع الكرمشة)	• تعمل الحمولات الصغيرة المكونة من ١ إلى ٤ عناصر بشكل أفضل. • قم بتحميل كمية قليلة من الملابس مع تَحميل الملابس المتشابهة.
تظل الروائح في الملابس بعد تشغيل خاصية "Refresh" (الإنعاش).	• ينبغي غسل الملابس التي تَحتوي على روائح قوية.

SDC16809-02885Q-03_AR.indd Sec4:30 2014-08-22 5:07:28

رموز المعلومات

قد يتم عرض رموز المعلومات للمساعدة في فهم الحادث داخل "المجفف" على نحو أفضل.

شاشة الأخطاء	المعنى	الحل
tE2	تم سد حاوية المصفاة المثقلة.	قم بتنظيف حاوية المصفاة أو المكثف. إذا استمرت المشكلة، قم بالاتصال بخدمة الصيانة.
tE4		
dE	تشغيل المجفف أثناء فتح الباب	قم بغلق الباب ثم أعد التشغيل. إذا استمر حدوث المشكلة قم بالاتصال بخدمة الصيانة.
dF	لم يتم غلق الباب بطريقة صحيحة	اتصل بخدمة الصيانة.
bE	علق الزر لأكثر من ٣٠ ثانية	تأكد من عدم الضغط على الزر باستمرار. أعد محاولة إعادة تشغيل الدورة. وإذا استمرت المشكلة، قم بالاتصال بخدمة الصيانة.
hE	تم سد حاوية المصفاة المثقلة. درجة حرارة للتسخين غير صالحة عند تشغيل المجفف.	قم بتنظيف حاوية المصفاة أو المكثف. إذا استمرت المشكلة قم بالاتصال بخدمة الصيانة
Et	يتعذر اتصال EEPROM (ذاكرة قراءة فقط مبرمجة يمكن مسحها كهربائيًا) بطريقة صحيحة	أعد محاولة إعادة تشغيل الدورة. وإذا واستمرت المشكلة، قم بالاتصال بخدمة الصيانة.
3E	لا يعمل محرك التشغيل بطريقة صحيحة.	أعد محاولة إعادة تشغيل الدورة. وإذا واستمرت المشكلة، قم بالاتصال بخدمة الصيانة.
5E	خزان المياه ملوء. مضخة التصريف معطلة.	أفرغ خزان المياه وأعد التشغيل مرة أخرى. إذا استمرت المشكلة، قم بالاتصال بخدمة الصيانة.

بالنسبة للرموز التي لم تذكر أعلاه، أو إذا لم يعمل الحل المقترح على حل المشكلة، اتصل بمركز خدمة Samsung أو الموزع المحلي المعتمد التابع لـ Samsung.

SDC16809-02885Q-03_AR.indd Sec4:31 2014-08-22 5:07:28

الملحق

جدول العناية بالأقمشة

توضح الرموز التالية تعليمات العناية بالملابس. تتضمن بطاقات العناية بالملابس رموزًا خاصة بالتجفيف والتبييض والتجفيف والكي أو التنظيف الجاف عند الضرورة. يضمن استخدام هذه الرموز التناسق بين الشركات المصنّعة للملابس المحلية والمستوردة. اتبع تعليمات بطاقة العناية لزيادة عمر الملابس وتقليل مشاكل الغسيل.

دورة الغسيل		إرشادات خاصة		رموز تحذيرية في عملية الغسيل	
Normal (عادي)		تجفيف على الحبل/ تعليق للتجفيف		لا تغسل	
الملابس المقاومة للتجاعيد / منع الكرمشة / التحكم في الكرمشة		التجفيف بالتعليق		لا تضغط	
الملابس الناعمة/الرقيقة		تجفف وهي مفرودة		لا تستخدم مادة تبييض	
غسل يدوي		إعدادات التسخين		لا تجفف بالتدوير	
درجة حرارة الماء**		High (عالي)		لا يوجد بخار (يُضاف للكي)	
●●● Hot (ساخن)		Medium (متوسط)		ممنوع الكي	
●● Warm (دافئ)		Low (منخفض)		تنظيف جاف	
● Cold (بارد)		أي درجة من السخونة		تنظيف جاف	
مادة تبييض		بدون تسخين/هواء		ممنوع استخدام التنظيف الجاف	
أي مادة تبييض (عند الحاجة)		التجفيف بالكي أو درجات حرارة البخار		تجفيف على الحبل/ تعليق للتجفيف	
خالي من الكلور فقط (لون آمن) مادة تبييض (عند الحاجة)		High (عالي)		التجفيف بالتعليق	
دورة تجفيف بالتدوير		Medium (متوسط)		تجفف وهي مفرودة	
Normal (عادي)		Low (منخفض)			
الملابس المقاومة للتجاعيد / منع الكرمشة / التحكم في الكرمشة					
الملابس الناعمة/الرقيقة					

** تمثل الرموز المنقطة درجات حرارة مياه الغسيل المناسبة لعناصر الملابس المختلفة. يتراوح نطاق درجة الحرارة الخاص بإعداد Hot (الساخن) بين ٤١ - ٥٢ درجة مئوية وبالنسبة لإعداد Warm (دافئ) ٢٩ - ٤١ درجة مئوية وبالنسبة لـ Cold (البارد) ١٦ - ٢٩ درجة مئوية. (يتعين أن يكون الحد الأدنى لدرجة حرارة مياه الغسيل ١٦ درجة مئوية لتنشيط المسحوق والتنظيف الفعال.)

SDC16809-02885Q-03_AR.indd Sec7:32 2014-08-22 5:07:28

حماية البيئة

هذا الجهاز مصنوع من مواد قابلة لإعادة التدوير. إذا قررت التخلص من هذا الجهاز، يرجى مراعاة القوانين المحلية الخاصة بالتخلص من النفايات. اقطع سلك التيار بحيث لا يمكن توصيل الجهاز بمصدر طاقة. قم بخلع الباب لمنع تعرض الحيوانات أو الأطفال الصغار للاحتباس داخل الجهاز.

بيان التوافق

يتوافق هذا الجهاز مع معايير السلامة الأوروبية (EN Standard 60335و EC directive 93/68).

المواصفات

النوع	مجفف أمامي للتحميل

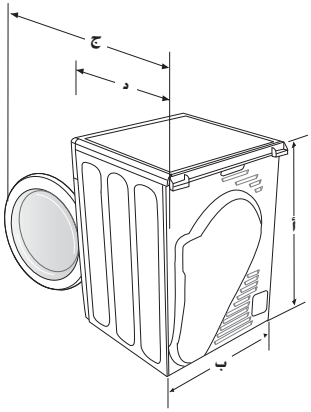

الأبعاد	أ. ارتفاع	٨٤,٨ سم
	ب. عرض	٥٩,٨ سم
	ج. عمق مع فتح بمقدار ٩٠ درجة	١٠٨,٦ سم
	د. عمق	٦٣,٤ سم
الوزن		٤٣ كجم
تصنيف السخان		٢٥٠٠ وات (١٧٥٠ وات + ٧٥٠ وات)
استهلاك الطاقة	بدون حرارة	١٧٥ وات
	التسخين	٢٧٠٠ وات
إنارة الحاوية		ضوء بيان LED (يختلف طبقًا للطراز)

لاستبدال ضوء بيان LED، الرجاء الاتصال بخط الخدمة الخاص بنا.

SDC16809-02885Q-03_AR.indd Sec7:33 2014-08-22 5:07:28

الملحق

جدول الدورات

(● خيار المستخدم)

الدورة		أقصى وزن (كجم) (ملابس جافة)	درجة الحرارة	الوقت	Delay End (نهاية التأجيل)	My Cycle (الدورة المفضلة)	خالي من الكرمشة	Sound Off (إيقاف الصوت)	Cooling Time (وقت التبريد) (بالدقيقة)
Cotton (قطن)	Extra Dry (تجفيف إضافي)	٧٠ / ٨٠	High (عالي)	١٣٤	●	●	●	●	٥
	Cupboard Dry (تجفيف خزانة)		High (عالي)	١١٩	●	●	●	●	٥
	Iron Dry (تجفيف بالكي)		High (عالي)	٩٩	●	●	●	●	٥
Synthetics (الألياف الصناعية)	Extra Dry (تجفيف إضافي)	٤	Medium (متوسط)	٥٩	●	●	●	●	٥
	Cupboard Dry (تجفيف خزانة)		Medium (متوسط)	٤٩	●	●	●	●	٥
	Iron Dry (تجفيف بالكي)		Medium (متوسط)	٣٩	●	●	●	●	٥
Ultra Delicate (تجفيف رقيق)		١	Low (منخفض)	٣٥	●	●	●	●	٣
Freshen Up (الإنعاش)		١,٥	High (عالي)	٣٠	●	●	●	●	٥
Sports Wear (الملابس الرياضية)		١,٥	Low (منخفض)	٥٠	●	●	●	●	٥
Quick Dry (تجفيف سريع)		-	High (عالي)	٢٩	●	●	●	●	٨
مدة التجفيف		-	High (عالي)	٤٠	●	●	●	●	٨
Cool Air (هواء بارد)		-	N/A (غير متوفر)	٢٠	●	●	●	●	

• ٧ : SDC**7** (٧ كجم)
• ٨ : SDC**8** (٨ كجم)

SDC16809-02885Q-03_AR.indd Sec7:34 2014-08-22 5:07:29

بيانات الاستهلاك

البرنامج	الحمولة(كجم)*	سرعة التدوير النهائية باستخدام الغسالة المحلية (دورة في الدقيقة)	طاقة (كيلو وات في الساعة)	المدة (الدقائق)
خزانة القطن	٨***	١٠٠٠ (٦٠٪ الرطوبة المتبقية)**	٤,٤٩	١١٩
		١٤٠٠ (٥٠٪ الرطوبة المتبقية)	٤,١٨	١١٠
	٧***	١٠٠٠ (٦٠٪ الرطوبة المتبقية)**	٣,٩٢	١١١
		١٤٠٠ (٥٠٪ الرطوبة المتبقية)	٣,٢٤	٨٢
كي القطن	٨***	١٠٠٠ (٦٠٪ الرطوبة المتبقية)**	٣,٩٦	٩٦
		١٤٠٠ (٥٠٪ الرطوبة المتبقية)	٣,٤٤	٨٧
	٧***	١٠٠٠ (٦٠٪ الرطوبة المتبقية)**	٣,٤٨	٩٩
		١٤٠٠ (٥٠٪ الرطوبة المتبقية)	٢,٩٤	٧١

١. * : وزن الغسيل الجاف

** : برنامج اختبار EN 61121:2005

٢. جميع البيانات بدون علامة "نجمة" يتم حسابها باستخدام EN 61121:2005

٣. ***٧ : SDC**7** (٧ كجم)

***٨ : SDC**8** (٨ كجم)

قد تختلف بيانات الاستهلاك عن القيم الاسمية المذكورة أعلاه وفقًا لحجم الحمولة وأنواع الملابس ومستويات الرطوبة المتبقية بعد التدوير واختلافات مزود درجة الحرارة وأي خيارات إضافية تم تحديدها.

SDC16809-02885Q-03_AR.indd Sec7:35 2014-08-22 5:07:29

هل لديك أي أسئلة أو تعليقات؟

البلد	اتصل بـ	أو قم بزيارة موقعنا على الإنترنت
SAUDI ARABIA	920021230	www.samsung.com/sa/support www.samsung.com/sa_en/support (English)

DC68-02885Q-03

SDC16809-02885Q-03_AR.indd Sec7:36 2014-08-22 5:07:29